

**NOTICE D'UTILISATION  
INSTRUCTIONS  
GEBRAUCHSANWEISUNG  
HANDLEIDING  
FOLLETO DE INSTRUCCIONES  
ISTRUZIONI PER L'USO  
INSTRUÇÕES DE UTILIZAÇÃO**

**BEABA**

**N°Vert 0 800 323976**

31, cours de Verdun  
01102 Oyonnax cedex - FRANCE  
Tél. +33 (0)4 74 73 15 63 - Fax : +33 (0)4 74 73 15 67  
<http://www.beaba.com>




AAP0265

**Babycook**

**BEABA**

 **PLEASE READ THIS INSTRUCTION LEAFLET CAREFULLY AND KEEP IT IN A SAFE PLACE**

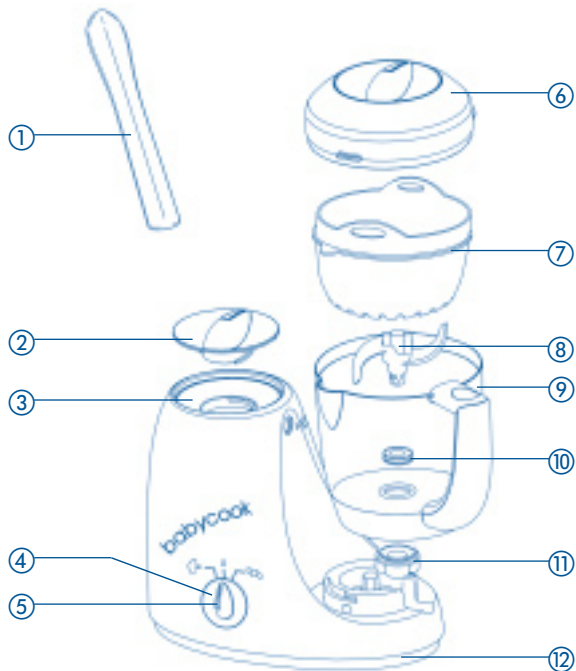

- ① Spatula
- ② Compartment lid
- ③ Steam heating compartment
- ④ Food processor controls:
  - cooking, reheating, defrosting
  - blending
- ⑤ Cooking light
- ⑥ Bowl lid: security locking system

- ⑦ Cooking, reheating, defrosting basket
- ⑧ Removable food processor blades: easy to clean
- ⑨ Blending bowl
- ⑩ Gasket
- ⑪ Bolt for detaching blades
- ⑫ Base

**GB** *We thank and congratulate you on your choice – you have purchased an appliance that has unique performance features. BABYCOOK has been specifically designed to prepare healthy meals for your baby, simply and rapidly. BABYCOOK cooks, reheats and defrosts food by steaming, which locks in the vitamins and ensures they are thoroughly blended."*

## HOW TO USE

- The appliance consists of a technical pedestal unit that incorporates a lidded heating reservoir, a removable food preparation bowl that takes the cook basket insert, the blending blade and lid.
- To lock the heating unit turn it clockwise.
- The preparation bowl lid locks by turning it anti-clockwise.
- The basket must be lifted out using the spatula slotted through the basket handles.
- Care should always be taken when handling the cutter (very sharp blades) and also when taking hold of the bowl and its accessories after cooking, the residual condensed water is very hot at the end of cooking time.
- **When the appliance is brand new, it is harder to lock the bowl, make sure you latch the bowl by turning it anti-clockwise until you hear it "CLICK", the appliance is then fully engaged.**

 
**If the bowl is not fully engaged, the safety device on the appliance lid will prevent it working.**



## WARNING

**Never immerse the electrical pedestal unit in water.**

**Plug the BABYCOOK into a 230 V earthed socket**



## COOKING

The lower part of the bowl is marked with a 1- 3 measuring scale. These mark lines are for measuring how much water to pour into the heating reservoir and so set the cooking time. (Refer to the cooking guide, page No.11)

- Pour the right amount of water into the cooking bowl (using the mark lines).
- Pour the water into the heating reservoir and lock the reservoir lid.
- Place the basket with its content of diced food in the bowl making sure that the basket tab lines up with the large pouring lip of the bowl, lock the cover tightly onto the bowl, then lock the whole unit onto the pedestal.
- Plug the appliance into the mains and turn the button to the left towards the steam symbol
- When the cooking indicator light goes out, unlock the bowl lid by turning its knob. Lift out the basket using the spatula and pour the contents into the bowl. Depending on the recipe you will either pour away or keep part of the cooking liquor.

## BLENDING

- Lock the lid tightly onto the bowl, then lock the whole unit onto the pedestal.
- Plug the appliance into the mains and turn the button to the right towards the blender symbol , until you get the right consistency (pulse action normally lasts 10 seconds).

## REHEATING

- Food that needs reheating must first be put into in a small glass or polycarbonate jar and placed uncovered in the cooking basket.
- Pour in 1 measure of water then proceed as for the cooking cycle.
- When the indicator light goes out, lift out the jar using a cloth, (warning – any water left over at the end of the cooking time is very hot) then mix the contents so that the temperature is even.

## DEFROSTING

- Follow the same method as for reheating, but pour in 2 measures of water instead of 1.

**NOTE** : Naturally it is best to use very fresh fruit and vegetables because they offer the highest vitamin content, but of course you can use your BABYCOOK to cook deep-frozen fruit and vegetables that have been defrosted either directly in the BABYCOOK or in the refrigerator (never defrost food at room temperature).

 
## OFF

- Turn the button back to the 0 symbol every time after use.

## COOKING GUIDE


Food	Measures of water		
	1	2	3
<b>Vegetables</b> Potatoes			•
Carrots*			•
Turnips*			•
Runner beans		•	
Courgettes		•	
Leeks			•
Peas			•
Pumpkin			•
Cauliflower			•
<b>Meat</b> Red			•
Poultry			•
<b>Fish</b>			•
<b>Fruit</b> Apples		•	
Pears		•	
Strawberries		•	
Mandarin oranges		•	
Pineapple			•
<b>Cooking time</b>	approx. 7 minutes	approx. 10 minutes	approx. 15 minutes

\* All food should be diced.



## CLEANING

 - Always unplug the appliance before you start cleaning it.
- Immediately rinse the accessories that have come into contact with the food under running water to prevent germs forming.
- **From time to time de-scale the heating reservoir:** pour 3 measures of vinegar, preferably spirit vinegar, into the heating reservoir. Run one cooking cycle then rinse carefully. Then run two heating cycles with plain water only (3 measures) in the reservoir to rinse it properly.
- After you have cleaned the blade, make sure that the gasket is properly back in place.

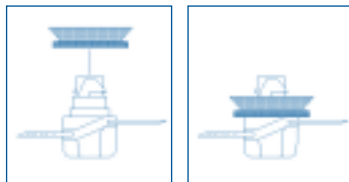

Placing the gasket on the blender cutter

## RECOMMENDATIONS

- Never put the bowl on the pedestal without the blender cutter in place
- Do not move the appliance or put a cover over it while in use.
- Never immerse the electrical pedestal unit in water.
- Keep the BABYCOOK out of children's reach and always lock the bowl lid fully so that the blade is inaccessible.
- Use the BABYCOOK on a flat surface.
- Plug the BABYCOOK into a 230 V earthed socket
- Do not run the BABYCOOK in cooking mode when the reservoir is dry
- Do not fill the bowl above the mark lines
- Regularly check that the steam outlet hole on the bowl is not blocked
- Never lean over the steam outlet hole during the cooking cycle (risk of scalding).
- Handle hot parts with great care.
- **Regularly de-scale the heating reservoir**
- If you need to make a claim, please quote the serial number printed on the label under the product (must be kept).

## TECHNICAL DATA

Voltage : 220-240 V ~ / 50-60 Hz  
Rating : 350 W (motor 120 W)

GB

## GUARANTEE

In addition to the legal warranty provided for by law on hidden defects, in any event, BEABA guarantees this product exclusively for domestic usage against any manufacturing fault or material defect.

The warranty period is 1 year from the date of purchase. During this period, the product will either be repaired or replaced free of charge.

The guarantee is only valid if proof of purchase is produced with the product.

It does not cover damage resulting from any use of the product not described in the instructions or if the product is knocked or dropped.

BEABA will not be held responsible for material damage or personal accidents resulting from any installation that does not comply with legal or statutory provisions.

Calling a guarantee does not give right to damages and interest.

We reserve the right to implement any modifications to the technical, design or colour specifications that we see fit to do.

This document has no contractual value apart from its guarantee clauses.

## WARNING

- **If you need to make a claim, please quote the serial number printed on the label under the product (must be kept).**
- **Danger avoidance: if the power cable is damaged it must be replaced by our after-sales service**

Tel: +33 (0)4 74 73 15 63