




## Boori Country Furniture


27-37 Vallance Street  
 St. Marys NSW 2760  
 Ph: (02) 9833 3769  
 Fax: (02) 9673 4240

### Instructions for the 3 Tier Changer

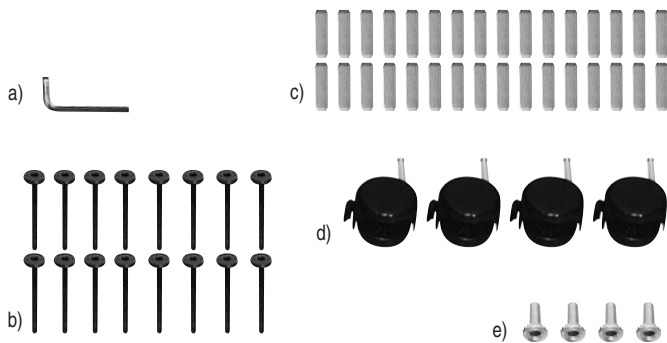


- a) 1 x Allen Key
- b) 16 x 54mm Connecting Bolts
- c) 32 x Wooden Dowels


- d) 4 x Castors
- e) 4 x Castor Sleeves

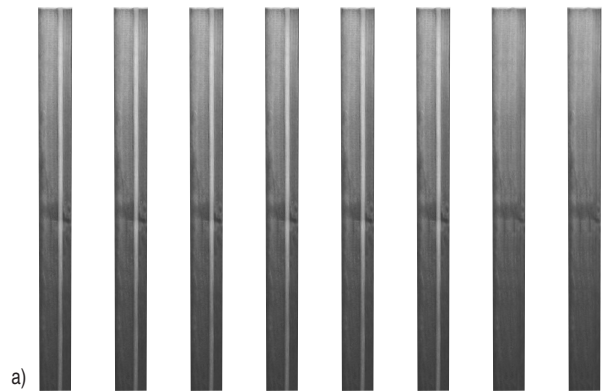

a) 8 x Shelf Rails

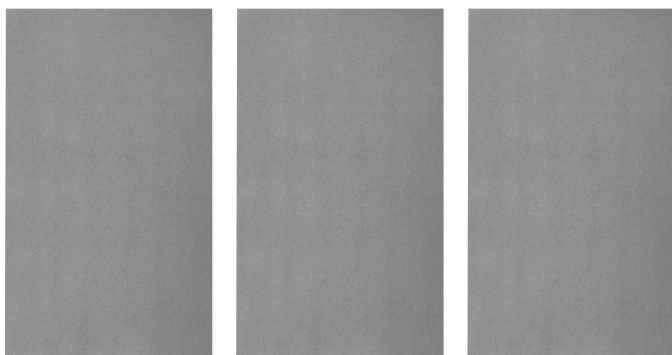

a) 3 x Shelf Panels

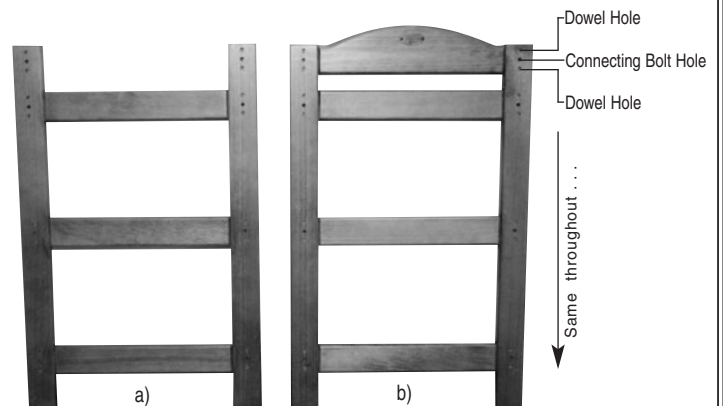

a) End Panel (Foot)

b) End Panel (Head)

## **Assembly:**

### **Stage 1:**

- Place both end panels on floor with holes facing up.
- Insert all 32 wooden dowels into the dowel holes.
- Gently hammer the 4 castor sleeves into the castor sleeve holes at the bottom of the end panels.
- Push castors into castor sleeves.



### **Stage 2:**

- Attach shelf rails to the head end panel.
- Gently insert shelf panels into the grooves of the shelf rails.



### **Stage 3:**

- Attach foot end panel to shelf rails.
- Place 8 x 70mm connecting bolts into the connecting bolt holes on top of the foot end panel. Tighten firmly using the allen key provided.



### **Stage 4:**

- Stand changer onto its 4 wheels (castors).
- Place the remaining 8 x 70mm connecting bolts into the connecting bolt holes on head end panel. Tighten firmly using the allen key provided.
- Your changer should now be complete.



## **WARNING:**

- Please ensure that the brakes on all four castors are released before moving the cradle.
- Regularly check your changer to ensure that all connecting bolts are tightly in place.
- It is recommended not to leave child unattended on changer.