


mothercare

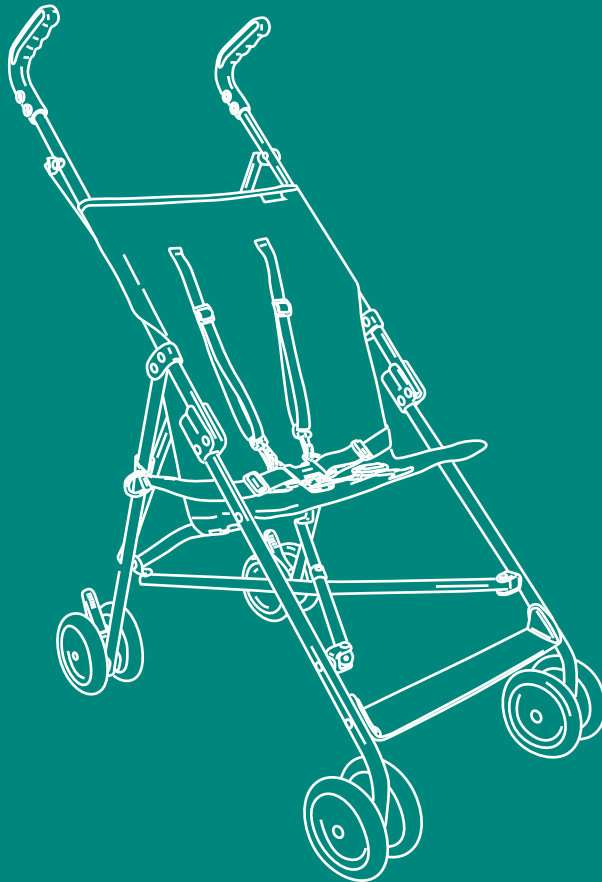


conga
stroller


user guide

IMPORTANT. KEEP FOR
FUTURE REFERENCE


opening

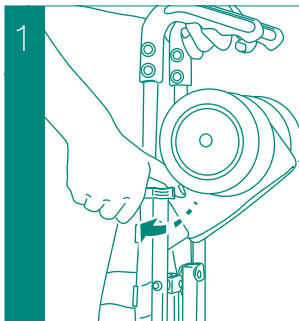

Release the catch.

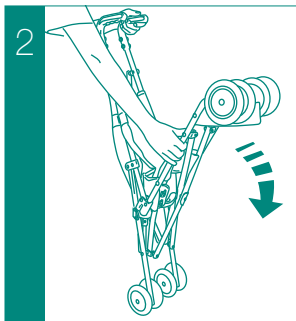


Push the front wheels down.

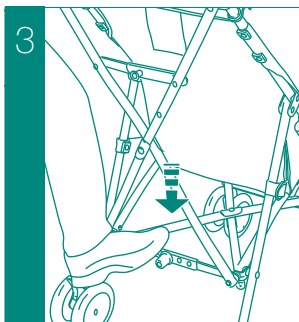

Push down on the locking bars until straight.


harness

1

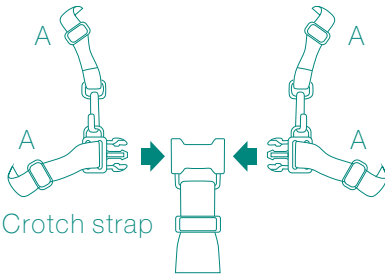

To fasten
Insert both fasteners securely into the clasp.
Adjust each strap length with buckles A.


2

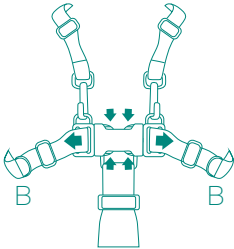

To release
Press the fastener prongs and pull apart.
'D' rings (B) are provided for fitting a separate harness complying with BS 6684.

Your child should be securely harnessed at all times and should never be left unattended, even for short periods.


brakes

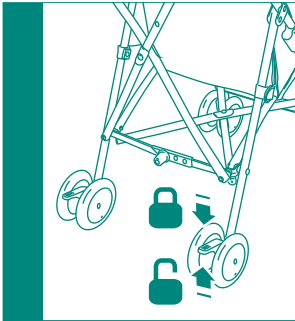


Push down on each brake pedal to engage the brakes.
Pull up release the brakes.

Check that the brakes have engaged correctly by gently pushing the stroller.


folding the stroller

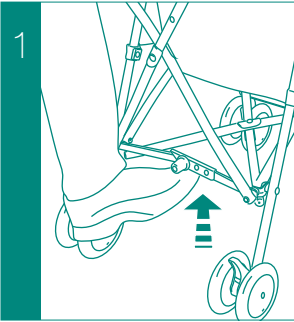


Lift the main lock up.

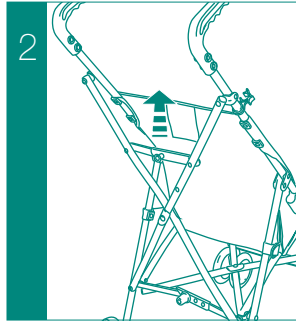

Lift up the secondary lock.

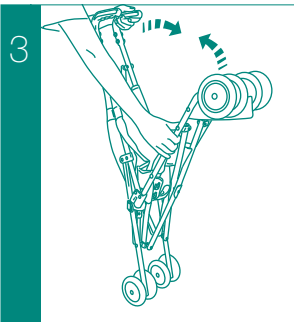

Push the handles forward.

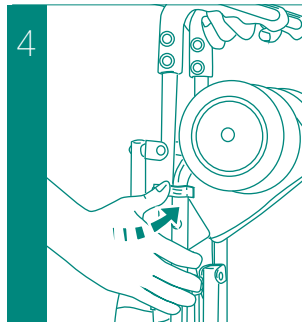

Secure the catch.

- Your stroller requires maintenance by you.
- Regularly inspect the locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are secure and in full working order. Brakes, wheels and tyres do wear and should be inspected most regularly. Stop using the stroller if these deteriorate unacceptably.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light silicone lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your stroller and make opening and folding easier.
- Plastic and metal parts may be sponged clean with warm water and a mild detergent.
- The seat may be cleaned by sponging lightly using warm water and a mild detergent. Dry thoroughly before storing.
- Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form. Store in a dry safe place.
- Do not leave in sunlight for prolonged periods - some fabrics may fade.

- YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY.
- Designed and tested to comply with BS 7409:1996.
- Do not allow your child to climb unassisted into the stroller.
Ensure your child wears a correctly fitted and adjusted harness at all times.
For extra safety, D-rings are provided for a separate safety harness approved to BS 6684.
- Ensure children are clear of moving parts before making adjustments.
- Overloading, incorrect folding and the use of non-approved accessories may damage or break this stroller.
- Never leave raincovers, hoods or aprons on indoors, in a hot atmosphere or near a heat source - your child may overheat.
- Do not use replacement parts or accessories, e.g. child seats, bag hooks, raincovers etc. other than those approved by Mothercare as they may make the stroller unsafe.
- Do not overload with additional children, goods or accessories. Bags and other items must not be hung from the handle.
- Always apply the brakes when stationary.
- Be careful when going up or down kerbs. Remove your child and fold the stroller when going up or down stairs or escalators.
- Do not use your stroller in a manner for which it is not designed.
- Do not let children play with or hang on to the stroller.
- Hold on to your stroller when close to moving road vehicles or trains.
Even with the brake on, the draught from the vehicle may move the stroller.
- If your stroller is used by someone unfamiliar with it e.g. grandparents always show them how it works.
- Never leave your child unattended, even for the shortest time.