



Apollo

Instruction Manual

IMPORTANT PLEASE READ THESE INSTRUCTIONS CAREFULLY
BEFORE USING THIS PRODUCT
KEEP FOR FUTURE REFERENCE

Thank you for choosing Obaby. To ensure that your stroller is used in accordance with these instructions, please read them fully. This stroller conforms to EN 1888 : 2003 and is guaranteed for 6 months from the date of purchase against manufacturing defects. If you have any problems please contact Obaby - info@obaby.co.uk or 0845 078 0290

Your child's safety may be affected if you do not follow these instructions.

- ⚠ WARNING:** A child's safety is your responsibility
- ⚠ WARNING:** Ensure that all locking devices are engaged before use
- ⚠ WARNING:** Children should be harnessed in at all times. Always use the crotch strap in combination with the waist belt
- ⚠ WARNING:** DO NOT hang shopping bags from the handle as this may affect the stroller's stability. Use the basket provided - maximum weight 3kg
- ⚠ WARNING:** This product is not suitable for running or skating. Never run or skate with your stroller, especially across roads
- ⚠ WARNING:** It may be dangerous to leave your child unattended
- ⚠ WARNING:** Do not use this product as a bed, your child may become tangled in straps and suffocate
- ⚠ WARNING:** The child should be clear of moving parts while making adjustments or opening or folding the stroller. Risk of serious injury (entrapment, laceration or amputation) exists

- This stroller requires regular maintenance by the user
- Overloading, incorrect folding and the use of non approved accessories may cause damage or break the stroller
- It may be unsafe to use replacement parts or accessories e.g. child seats, bag hooks, rain covers, etc, other than those approved by the manufacturer or distributor
- Always balance the weight of the stroller evenly
- We advise that your stroller is not stored or left out side at any time
- This stroller is intended to carry two children from birth and up to a maximum weight of 15kg per child

ROUTINE CARE & MAINTENANCE

- For cleaning, use only a mild detergent and warm water
- DO NOT USE BLEACH
- DO NOT USE any abrasive substances
- From time to time, check your stroller for loose screws, worn parts, torn material or stitching. Replace or adjust the parts as needed.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please call the help line 08450 782 290 or email info@obaby.co.uk





fig. 1

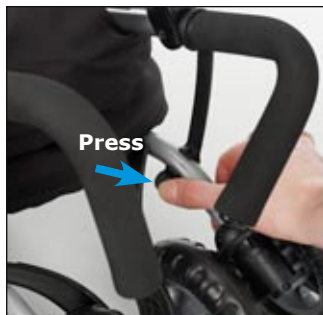


fig. 2



fig. 3



fig. 4



fig. 5



fig. 6

To open your stroller release the storage clips on both sides of the stroller (fig.1 & 2). Lift the handles away from the wheels (fig.3).

Using your foot push down on the two primary release locks at the back of the stroller (fig.4), one at a time. Ensure the locks click into place (fig.5 & 6).

⚠ WARNING: Ensure that all locking devices are engaged before use. The child should be clear of moving parts while making adjustments or opening or folding the stroller. Risk of serious injury (entrapment, laceration or amputation) exists.



fig. 7



fig. 8



fig. 9



fig. 10



fig. 11



fig. 12

Before attempting to fold your stroller

- The front wheels should be locked in place
- The basket and seat unit should be empty
- The hood should be folded
- The seat should be fully upright

To fold the stroller, release the two primary locks, at the back of the stroller, one at a time, by pulling away from the stroller and then lifting using your hand or foot (fig.7).

Next, using your foot press down on the secondary lock at the right hand side of the stroller (fig.8). Then push the handles forwards and down towards the front wheels (fig.9), until completely folded (fig.10). Engage the storage clips onto the front legs of the chassis at both sides of the stroller (fig.11 & 12).



fig. 13



fig. 14



fig. 15

To fit the front wheels, push the wheels onto the front legs until they click into place.

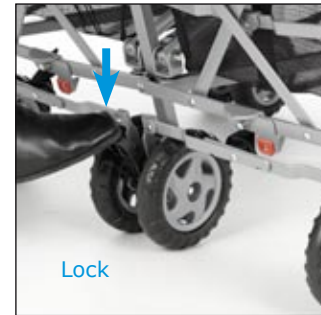


fig. 19

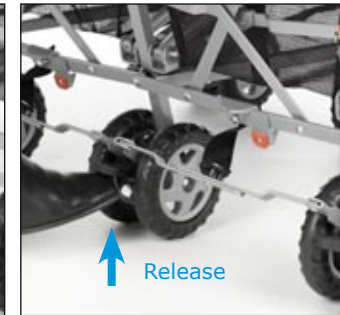


fig. 20

To lock the brakes fully, push down on each brake lever using your foot (fig.19).

To release the brakes, lift each brake lever using your foot (fig.20).

Using the Front Swivel Wheels



fig. 16



fig. 17



fig. 18

To put the wheels in swivel mode, lift the lever on the front of each front wheel (fig.16 & 17).

To lock the swivel wheels, first ensure the front wheels are facing forward inline with the chassis, then push the lever down (fig.18).

Adjusting the Backrest



fig. 21



fig. 22



fig. 23

To recline the backrest, press the button on the toggle and pull away from the seat to the desired height (fig.21). Lower the seat to rest on the toggle (fig.22).

To put upright, grip the sides of the toggle with one hand, and the strap with the other hand and slide the toggle up the strap to the desired height (fig.23).



fig. 24



fig. 25



fig. 26

To fit the hood, place the hood on the chassis, inline with the seat unit. Clip the hood catches onto each side of the chassis (fig.24 & 25). Then to prevent the hood slipping down pull the elastic around the chassis and loop over the peg on the side of the hood (fig.26).

Adjusting the Hood



fig. 27



fig. 28



fig. 29

To fold the hood, pull the hood adjusters up on both sides of the hood, as shown above.



fig. 30

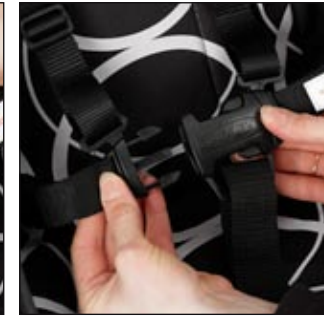


fig. 31

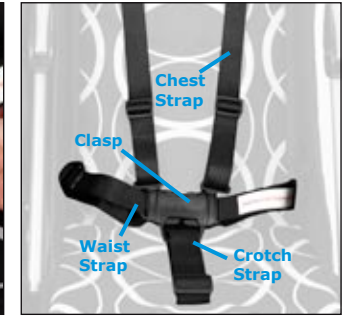


fig. 32



fig. 33

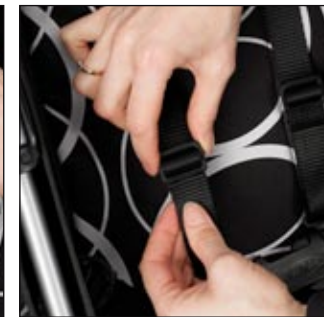


fig. 34

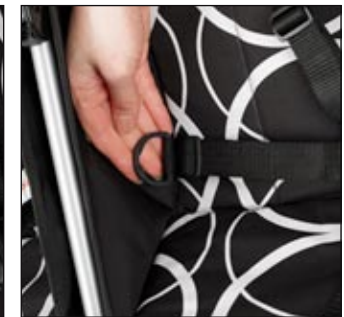


fig. 35

To fasten the harness, insert both fasteners on the waist strap through the loop on the chest strap (fig.30) and secure into the clasp on the crotch strap (fig.31 & 32).

To release the harness, squeeze each of the clips in the centre of the harness and pull away from the clasp, one at a time (fig.33).

Adjust the harness length using the buckles on each strap (fig.34).

'D' Ring

The 'D' rings highlighted are provided for fitting a separate harness complying with BS 6684 (fig.35).

WARNING: Ensure the harness is correctly fitted before use. The harness should always be adjusted to fit correctly. Children should be harnessed in at all times. Always use the crotch strap in combination with the waist strap.



info@obaby.co.uk
0845 078 0290