



Atlas Plus

Instruction Manual

IMPORTANT PLEASE READ THESE INSTRUCTIONS CAREFULLY
BEFORE USING THIS PRODUCT
KEEP FOR FUTURE REFERENCE

Thank you for choosing Obaby. To ensure that your stroller is used in accordance with these instructions, please read them fully. This stroller conforms to EN 1888 : 2003 and is guaranteed for 6 months from the date of purchase against manufacturing defects. If you have any problems please contact Obaby - info@obaby.co.uk or 0845 078 0290

Your child's safety may be affected if you do not follow these instructions.

- ⚠ WARNING:** A child's safety is your responsibility
- ⚠ WARNING:** Ensure that all locking devices are engaged before use
- ⚠ WARNING:** Children should be harnessed in at all times. Always use the crotch strap in combination with the waist belt
- ⚠ WARNING:** DO NOT hang shopping bags from the handle as this may affect the stroller's stability. Use the basket provided - maximum weight 3kg
- ⚠ WARNING:** This product is not suitable for running or skating. Never run or skate with your stroller, especially across roads
- ⚠ WARNING:** It may be dangerous to leave your child unattended
- ⚠ WARNING:** Do not use this product as a bed, your child may become tangled in straps and suffocate
- ⚠ WARNING:** The child should be clear of moving parts while making adjustments or opening or folding the stroller. Risk of serious injury (entrapment, laceration or amputation) exists

- This stroller requires regular maintenance by the user
- Overloading, incorrect folding and the use of non approved accessories may cause damage or break the stroller
- It may be unsafe to use replacement parts or accessories e.g. child seats, bag hooks, rain covers, etc, other than those approved by the manufacturer or distributor
- Always balance the weight of the stroller evenly
- We advise that your stroller is not stored or left out side at any time
- This stroller is intended to carry one child from birth and up to a maximum weight of 15kg

ROUTINE CARE & MAINTENANCE

- For cleaning, use only a mild detergent and warm water
- DO NOT USE BLEACH
- DO NOT USE any abrasive substances
- From time to time, check your stroller for loose screws, worn parts, torn material or stitching. Replace or adjust the parts as needed.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please call the help line 08450 782 290 or email info@obaby.co.uk





fig. 1



fig. 2



fig. 3

To open your stroller release the storage clip on the right hand side of the stroller (fig.1). Lift the handles away from the front wheels (fig.2). Push down on the locking bar until its straight (fig.3).

⚠ WARNING: Ensure that all locking devices are engaged before use.
The child should be clear of moving parts while making adjustments or opening or folding the stroller. Risk of serious injury (entrapment, laceration or amputation) exists.

Folding your Stroller



fig. 4



fig. 5



fig. 6

Before attempting to fold your stroller

- The front wheels should be locked in place
- The basket and seat unit should be empty
- The hood should be folded and the seat should be fully upright

To fold the stroller, release the primary lock using your foot or hand by pulling and lifting at the same time (fig.4).

Next push the secondary lock down with your foot (fig.5). While pushing down on the secondary lock, push the handles forward towards the front wheels, until completely folded and engage the storage clip. (fig.6).



fig. 7



fig. 8

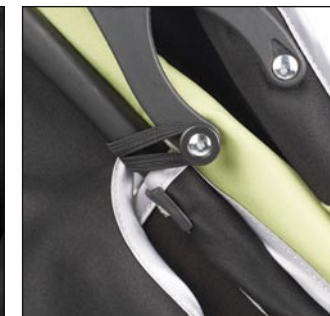


fig. 9

To fit the hood, place the hood on the chassis, inline with the seat unit. Clip the hood locks in on each side of the chassis (fig.7 & 8). Then to prevent the hood slipping down pull the elastic around the chassis and attach to the hood (fig.9).

Adjusting the Hood



fig. 10



fig. 11



fig. 12

To fold the hood pull the hood adjusters up on each side of the hood, as shown above.



fig. 13

fig. 14

fig. 15

To fit the front wheels, push the wheels onto the front legs until they click into place.



fig. 18

fig. 19

fig. 20

To lock the swivel wheels, first ensure the front wheels are facing forward in line with the chassis. Then lift the lever up on each wheel and clip into place (fig.18). To allow the wheels to swivel push the lever down (fig.19 & 20).

Applying the Brakes



fig. 16

fig. 17

To lock the brakes, using your foot, push down on each brake pedal to engage the brakes fully (fig.16).

To release the brakes, using your foot, lift each brake pedal to release the brakes (fig.17).

Using the Harness



fig. 21

fig. 22

fig. 23

To fasten the harness, insert both fasteners securely into the clasp (fig.21). To release the harness, squeeze each of each clips in the centre of the harness and pull away from the clasp, one at a time (fig.22).

Adjust the length using the buckles on each strap.

'D' Ring

The 'D' rings highlighted are provided for fitting a separate harness complying with BS 6684 (fig.23).

WARNING: Ensure the harness is correctly fitted before use. The harness should always be adjusted to fit correctly. Children should be harnessed in at all times. Always use the crotch strap in combination with the waist belt.



fig. 24



fig. 25



fig. 26

To put upright, simply lift the back of the seat to the desired height (fig.24).

To recline the backrest, slightly lift the catches on either side of the seat, then depress the buttons (fig.25) and gently pull towards the back of the stroller (fig.26).

Adjusting the Calf Rest



fig. 27



fig. 28



fig. 29

To adjust the calf rest press the levers either side of the stroller and lift or lower to the correct position.



info@obaby.co.uk
0845 078 0290