



OBABY

www.obaby.co.uk

Megan

IMPORTANT

**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT
KEEP FOR FUTURE REFERENCE**

O Baby Megan

Thank you for choosing O Baby. To see the complete O baby range please look online www.obaby.co.uk

INSTRUCTIONS & IMPORTANT SAFETY NOTES FOR USE

Please Note:

Your child's safety depends on you. Please read the instructions carefully before use!

A CHILD'S SAFETY IS YOUR RESPONSIBILITY!

This High chair complies with the following standards ENV 1178-1 DVN 2504

Do not use this high chair until the child can sit up unaided.

Do not use the high chair if there are any missing or broken parts.

Please take time to read this user guide to prevent any problems in the future.

NEVER LEAVE YOUR CHILD UNATTENDED WHILE IN THE HIGH CHAIR! Accidents can happen quickly while your back is turned. You must always keep your child in view while they are in the high chair, even while sleeping.

ALWAYS STRAP YOUR CHILD IN THE HIGH CHAIR TO PREVENT THEM FROM STANDING OR FALLING OUT.

DO NOT USE THE HIGH CHAIR UNLESS ALL COMPONENTS ARE CORRECTLY FITTED AND ADJUSTED.

The high chair must be used with a safety harness approved to BS6684:1989, correctly fitted and adjusted to fit the child correctly.

The high chair must always be used on a level and stable surface.

Strong heat sources, e.g. open, electric or gas fires in the vicinity of the high chair may be dangerous if placed near the high chair.

Keep away from trailing cords, drapes or flexes, and away from electric sockets.

Never move the high chair with the child in it.

Never allow older children to climb on the high chair, especially while there is a child in it.

Always use the high chair with the seat in the highest possible while still allowing the child to be easily moved in and out of the chair.

The footrest must be fitted in a position where the child is unable to stand up and climb out of the seat.

Your high chair can be converted to a chair for use by older children. To do this you will need to remove the safety bar and harness.

The seat and footrest can be repositioned to suit your child, read the complete instructions for details.

Periodically check all fittings to ensure that none have come loose.

The high chair can be cleaned by wiping with a damp cloth and drying with a soft dry cloth.

Never clean with abrasive, ammonia based, bleach based, or spirit type cleaners.

Take care when handling or moving the high chair. Careless handling can damage.

Parts




Lay all the parts out on the floor and compare to the parts check list.
Do not discard any packaging until you are sure you have all the correct parts.

1. Foot Rest
2. Seat
3. 2x Sides
4. Back rest
5. Safety Bar
6. Back Support
7. Frame Support
8. Harness
9. 2x Metal Frame Supports
10. 6x Long Bolts
11. Allen Key
12. 4x Short Bolts
13. 6x Barrel Nuts

You will also need a flat head screw driver to assemble this high chair.

Assembling your High Chair

Don't completely tighten all the screws until the high chair is completely assembled.

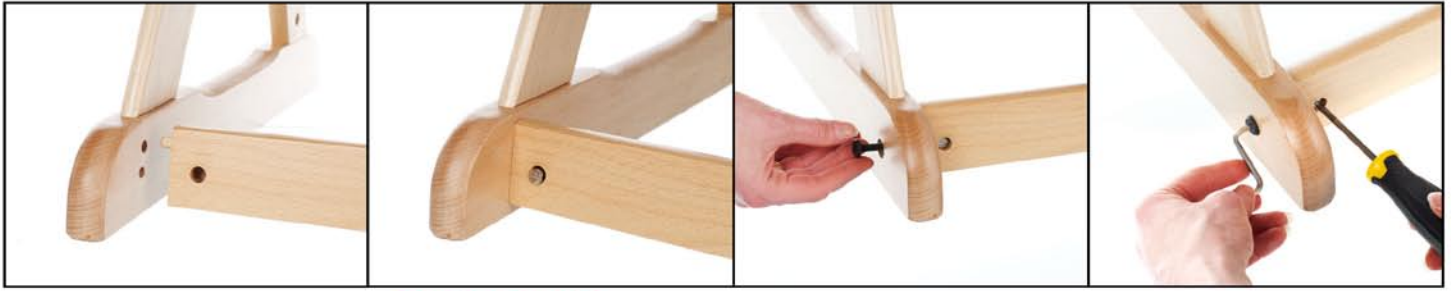

Fitting one side using parts ③ ⑦ ⑩ & ⑬




Using the same side fit both the metal supports using parts ③ ⑨ & ⑫



Using the same side fit both the metal supports using parts ③ ⑨ & ⑫

Assembling your High Chair

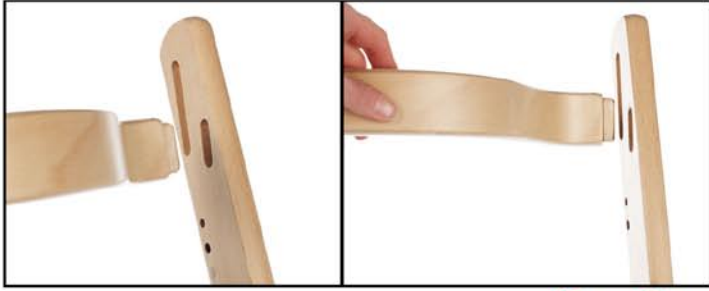

Fit the safety bar to the side using parts ③ & ⑤



Fit the backrest to the side using parts ③ ⑥ ⑩ & ⑬



Before completely fitting the safety bar and seat unit ensure the harness is fitted. ② ⑤ & ⑧

Assembling your High Chair



Fit the larger back rest using parts ③ ④ ⑩ & ⑬



Now slide the seat and the foot rest at the correct highs

Before use, ensure to tighten all the screws equally before use.

Assembling your High Chair



To change from a high chair to a seat, simply remove the safety bar and remove the harness. Slide the seat unit and foot rest to the desired height.