




# Tiny Ted Rocker user guide

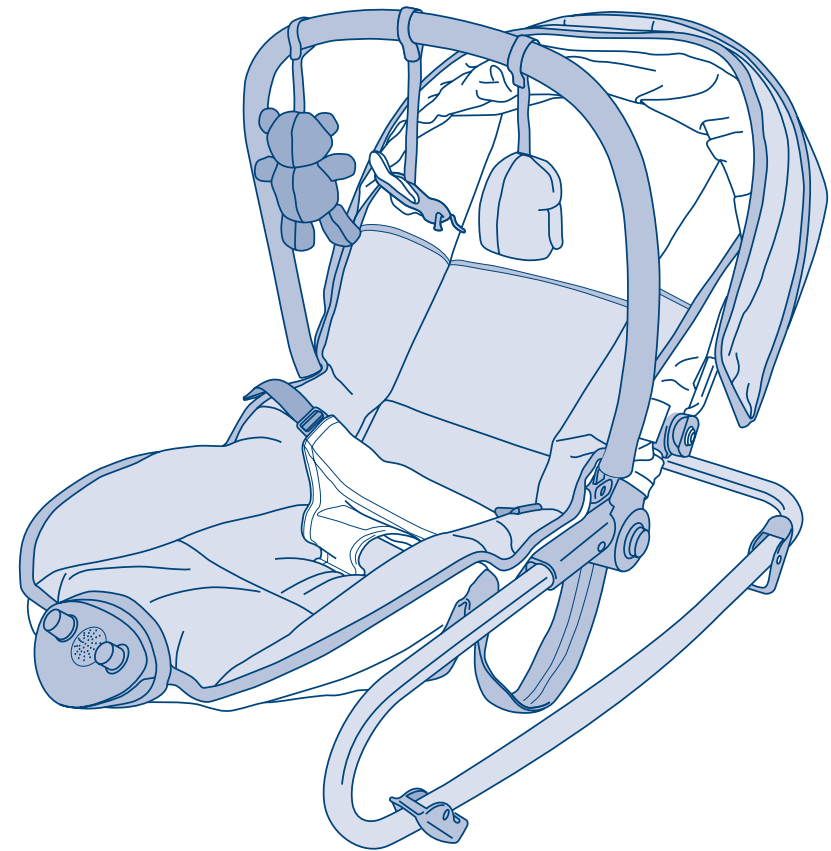

In the event of a problem with your product, please contact:

Customer Care  
Mothercare UK Ltd.  
Cherry Tree Road  
Watford  
WD24 6SH

**WARNING - Important**  
Keep for future reference

## introduction

This rocking cradle is designed for children who cannot sit up unaided (approx. 6 months; until 9kg).

**WARNING!** do not use once baby starts to sit up unaided.


**WARNING!** carry handles are provided for picking up the empty cradle. Never lift the cradle with a child inside it.

**WARNING!** Never attempt to lift the cradle by the toy bar. For your child's safety, the toy bar will detach if such an attempt is made.

This product features a reclining backrest, adjustable hood, vibration unit and hanging toys.


## parts checklist

fig 1a

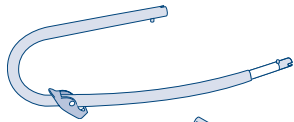


Side bar (x2)

fig 1b

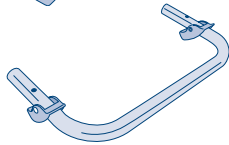


Back bar

fig 1c

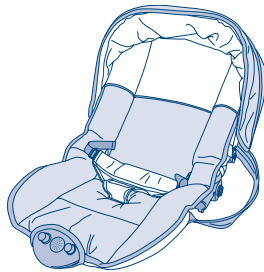

Seat unit with vibrating unit attached

fig 1d

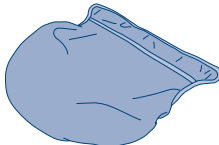

Blanket

fig 1e



Toy bar and toys


1

## preparation for use

### inserting batteries into the vibrating unit


The Tiny Ted Rocker comes with a vibrating unit. It may be easier to insert batteries into the unit before you fully assemble the rocker. Batteries are not included with the rocker.

fig 1

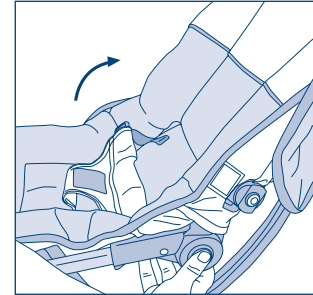

Press the buttons on either side of the seat unit and fold the seat up towards the backrest.


fig 2

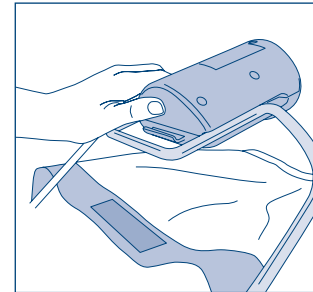

Undo the clip holding the seat cover in place and unhook the fabric from the foot of the seat to reveal the vibrating unit.

Unclip the vibrating unit and push it away from the seat frame.

fig 3

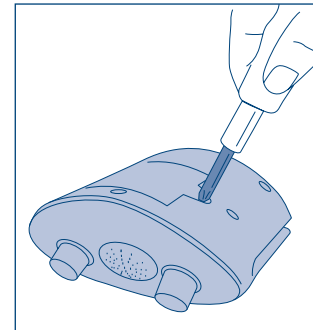

Unscrew the battery cover using a Phillips screwdriver and insert 3 AA batteries, following the polarity noted inside the battery compartment.


Replace the battery cover, slide the vibrating unit back along the seat frame and clip it into place. Pull the seat cover back over the vibrating unit and fasten the clip to hold it in place.

2

## preparation for use

### assembling the rocker

fig 1a

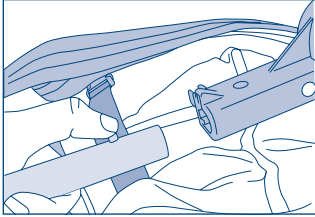

Insert each side bar into the plastic connectors on the seat unit. Press the pins on each side bar down and ensure they click into place in the connectors.

fig 1b


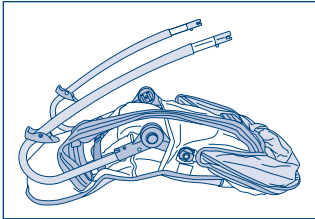


fig 2

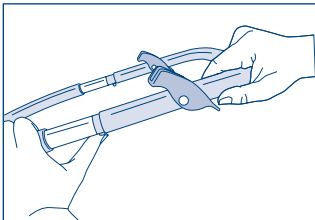


Insert the base bar into the openings on the opposite ends of the side bars. The pinholes on the base bar should be facing up and the stabilising feet down. As above, press the pins on the ends of the side bars.

**NOTE:** If you find the pins hard to push in, press them down by using a flat implement, for example the handle of a spoon.

## preparation for use


### attaching the toy bar

fig 1

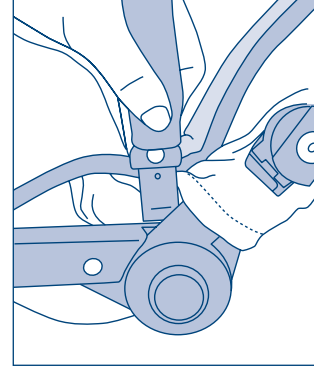

Push each end of the toy bar into the slots located just inside the edges of the seat unit. It will click into place.

fig 2

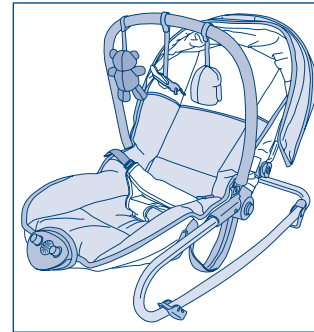


The toys are attached with touch fasteners and can be removed as required.

The toy bar will release easily when pulled.  
Never attempt to lift the cradle by the toy bar.

## in use

### fastening the harness

fig 1

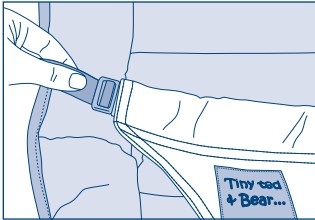


To secure your child in the harness, place the crotch strap between your child's legs and insert the harness prongs into the side buckle, making sure your child's fingers are clear. Pull the loose end of the harness to get a snug fit around your child.

To release the harness, squeeze the buckle prongs together.

### adjusting the backrest

fig 1

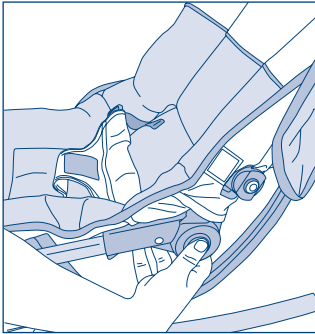


Press the buttons on either side of the seat unit to lift the backrest or lower it as required.

The seat will click into place. Make sure it is securely adjusted by gently pressing on it.

### operating the vibration unit

fig 1

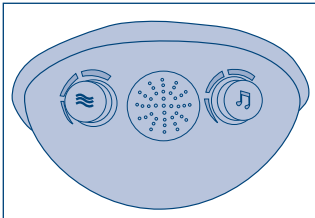

Switch the unit on.

Use the left dial to select the strength of the vibration and use the right dial to select the volume of the music.



**NOTE:** Please check batteries regularly. If the vibration and sound module does not function correctly, please replace the batteries with new or fully charged rechargeable batteries.

## in use

### using the stabilising feet



On the base of the Tiny Ted are four stabilising feet. Simply rotate them as shown below to allow the Tiny Ted to rock.

fig 1a

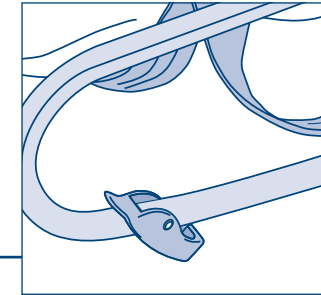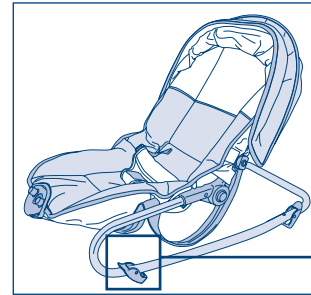

Still mode

fig 1b

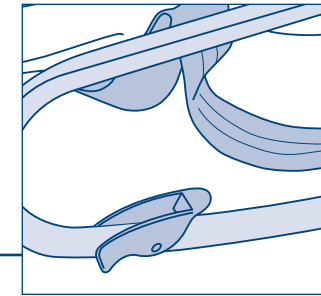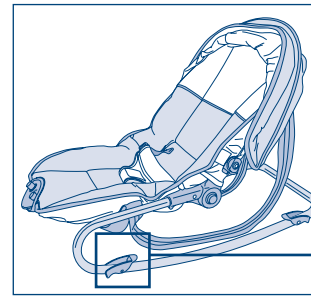

Rocking mode

## in use


### adjusting the hood

fig 1



The hood can be adjusted to provide shade. Please note that the hood does not provide protection from the sun.


fig 2

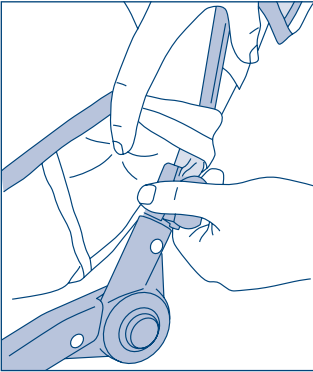

To remove the hood, unclip it from the seat frame.

### attaching the blanket

fig 1

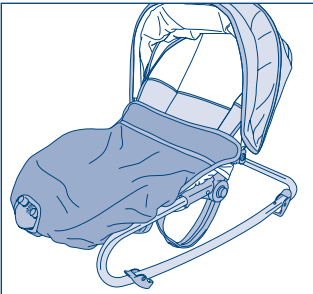


Hook the edge of the blanket around the foot of the seat so that the vibration unit fits through the hole. Secure the top edges to the seat with the touch fasteners.

## in use


### using the carry handles

fig 1

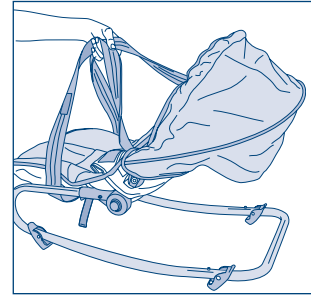

**WARNING** Do not use the carry handles when your child is in the Tiny Ted. The handles are for transporting the Tiny Ted when empty only.

fig 2

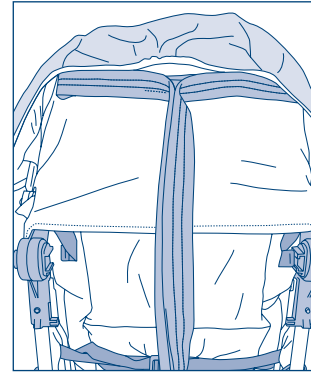


When your child is in the Tiny Ted, the straps should be secured underneath the seat unit using the touch fasteners, as shown opposite.

## care of your product


### removing and cleaning the seat fabric

fig 1

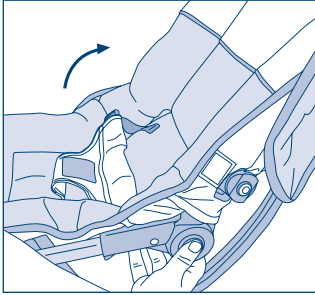

Remove the back bar, side bars and hood if attached. Press the buttons on either side of the seat unit and fold the seat up towards the backrest.

fig 2

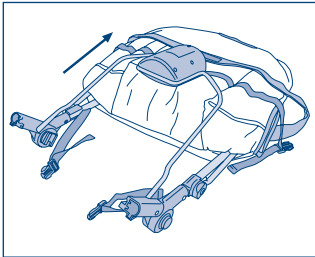

Undo the clips holding the seat cover in place, unhook the fabric from the foot of the seat and pull the fabric over the top of the seat frame.

Follow the care instructions on the back of the fabric and ensure that all metal parts of the frame are removed from the seat before washing.

### additional care information

- Ensure the frame is correctly re-assembled before use, by following these instructions.
- Regularly check that the frame remains securely assembled and that the fabric and stitching isn't damaged.

## safety

- **WARNING** – Never leave a child unattended in the rocker.
- **WARNING** – It is dangerous to put this rocker on an elevated surface, such as a worktop or bed.
- Do not use near an open fire or any other kind of heater.
- Keep children away from the cradle during set-up and when not in use.
- Never use as a child restraint in a vehicle.
- Never pick the cradle up with the baby in it.
- Do not use near stairs or steps.
- Always use the harness, ensuring it is correctly adjusted at all times.
- Regularly check for loose or damaged parts and discontinue use should parts become damaged or broken.
- Do not use once the child starts to sit up unaided.
- Do not use replacement parts or accessories other than those approved by Mothercare as they may make the cradle unsafe.
- Battery removal and replacement must be carried out by an adult.
- Batteries should be inserted with the correct polarity, observing (+) and (-) marks on the batteries and product.
- Only use batteries of the same or equivalent type to those recommended.
- Avoid short-circuiting the terminals in the battery compartment, or the battery terminals.
- Do not mix old (used) and new batteries, or batteries of different types (e.g. alkaline and rechargeable).
- Remove exhausted batteries from toys. Battery leakage and corrosion can damage this toy.
- Remove the batteries if storing product for long periods of non-use.
- Dispose of exhausted batteries safely, and never dispose of batteries in a fire.
- Never attempt to recharge non-rechargeable batteries.
- Always remove rechargeable batteries before being charged. Removal and recharging of rechargeable batteries must be carried out by an adult.