

phil&teds®

english



.....> inline™ vibe survival guide

> welcome to the crazy world of parenting.
take a deep breath...

note:

PG ^{female}
~~parental~~ guidance required

NB baby not included



4 in 1









adapt&survive!™






vibe.....undressed! <.....



.....> do it!
-no not that, this....>

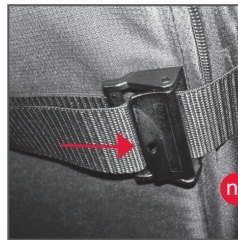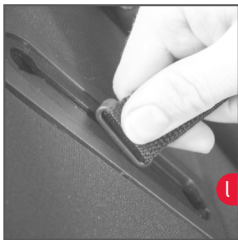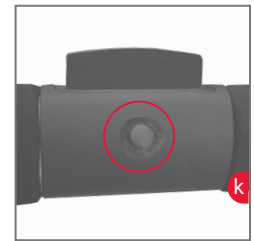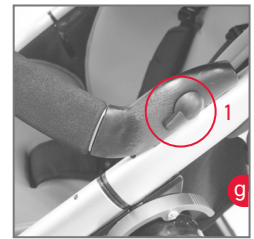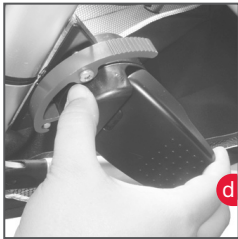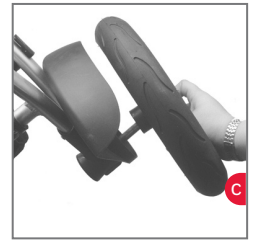

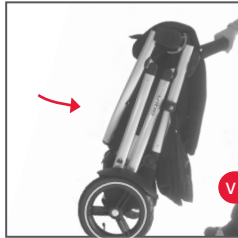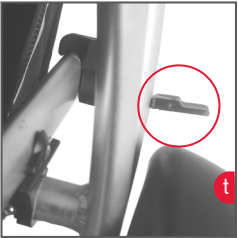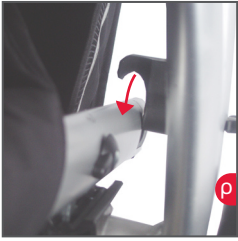

that's it!

vibe instructions

assembling your new phil&teds inline™ vibe is effortless and tool-free. just follow these simple steps and in 4.25 minutes you'll be off.

bits & bobs

the red numbers below refer to buggy parts indicated inside the back flap of this guide.

1. intelligent handle brake
2. intelligent handle
3. wrist strap
4. double kit (sold separately)
5. fold lock
6. double kit harness
7. rear guards
8. rear axles
9. rear wheels
10. sunhood
11. back flap
12. slide lock harness
13. pull bar
14. red safety lock
15. footwell
16. swivel lock
17. double kit spring lock
18. front wheel

safe & sound

we've attained the following safety standards.

- EN 1888:2005
- AS/NZS 2088:2000
- ASTM F833-07a

wheeling & dealing

keep tyres inflated to 22PSI max

- a attach rear guards by sliding them down track at base of wheel frame. to remove rear guards, pull bottom edge of guard outwards and slide it up and out of track.
- b insert axles into rear wheels (from side without brake disk).
- c to attach rear wheels: depress silver axle hub and insert wheel axle into buggy axle housing.
- d to unfold frame: open fold lock handles.
- e open and extend buggy, close fold lock handles.
- f to attach front wheel: fully extend swivel lock knob and insert wheel rod into buggy frame, as shown. release swivel lock knob and check wheel is in place for use.
to place front wheel in swivel position: rotate 90° until swivel lock knob clicks into place (visibly extended).
to lock swivel wheel: rotate 90° until swivel lock knob clicks into place and is no longer extended.

pull bar

- g** slot pull bar into upper set of sockets on centre front of buggy frame.
to remove: rotate bayonet release levers '1' upwards, slide pull bar up frame, lift and remove pull bar.
- h** when double kit is attached to front of buggy (baby & toddler position), remove pull bar and store in moulded sockets on rear cross bar, as shown.

sunhood

- i** your vibe will arrive with its sunhood attached, to remove: place thumbs on plastic clips and rotate snap attachments outwards, remove sunhood from frame.
to re-attach: lay sunhood on frame facing down towards front end of buggy. use palms of hands to snap attach plastic clips onto frame. rotate sunhood backwards. slide snap attachments up/down frame to alter headroom.

intelligent handle adjustment

- j** to alter handle height: depress both black buttons located on inside of handle and rotate handle into desired position.

intelligent handle brake

- k** press small red button for park.
press large black button for go.

harness adjustment

- l** under padded seat, turn harness strap retainer to vertical position and slide to either top, middle, or lower setting. lock in place by turning strap retainer to horizontal position.
note breastplate should fit snugly on baby's chest, allowing you to fit 2 average sized fingers between straps and baby. harness strap tension can be adjusted using clips located at shoulder height.

ups & downs

- m** vibe seat can be adjusted to any ergonomic position from upright through to lie-flat.
- n** to adjust seat for recline: release seat adjustment clip on seat back, recline seat into desired position, secure seat adjustment clip.
to adjust seat for lie-flat position:
recline seat fully and undo zips on either side of front seat pad.

double buggy

- to use baby & toddler position requires purchase of phil&teds double kit accessory.
- o** double kit on back: fit double kit into moulded plastic sockets on rear cross bar and ensure bayonet fitting is secure. tilt double kit back ensuring spring locks are engaged. load heavier toddler in front seat first. then place lighter toddler in double kit

at back. always unload rear toddler first.

warning: never place a child in double kit without a child in front seat.

p to remove: double kit from rear rotate bayonet release levers upwards, slide double kit backwards, lift and remove.

q attaching double kit to front: place vibe seat in lie-flat position. remove pull bar from front of vibe and fit double kit into front frame sockets.

note double kit can fit in either set of sockets. to remove from front of buggy: rotate bayonet release levers upwards, slide double kit up frame, lift and remove.

note: double kit has a recline feature.

to activate: undo zips that run around back of seat.

folding

to prepare for folding: rotate handle into upper most position and ensure front wheel is in swivel mode. release child harness. release fold locks.

note vibe can be folded with double kit attached to front or rear.

r folding without double kit on: depress red safety lock.

s fold so that buggy nose cone and handle come together, ensure front wheel lies flat against buggy. lock frame and secure by closing fold locks.

note: sunhood, pull bar, and double kit can remain attached.

t folding with double kit on: release double kit spring locks as shown.

note do not take double kit out of moulded sockets.

u tilt double kit towards front of buggy. lift front seat up and slide double kit underneath. close fold/safety locks.

v folded buggy can be manoeuvred using pull bar as handle.

add & adapt

other products available for vibe:

buggy covers

- single and double storm cover
- single and double mesh cover

buggy beds and liners

- buggy cocoon
- snuggle & snooze sleeping bag

buggy storage

- up & away travel bag
- base bag
- diddie bag

cuts & bruises

cleaning & caring for your vibe.

vibe fabric

brush off dirt. more intense cleaning can be done by hand, in warm water, using a mild natural soap. do not use detergents or bleach. air dry.

vibe frame

brush dirt off frame and wheels regularly. clean with a non-abrasive household cleaner and soft cloth. wash off sand and salt after visiting beach. always dry frame if wet.

vibe tyre and inner tube

the valve is car-size. manually inflate to 22psi max. releasing air gives a softer ride but lower pressure reduces tread life. new inner tubes and tyres are generally available (30cm x 5cm low profile tyre) from your dealer, cycle or specialist wheel shops. standard tyre kits can repair punctures. a flat tyre can result from grit holding the valve open; to check: inflate tyre, deflate rapidly, and re-inflate. tyres and tubes are not under warranty. do not over inflate. tyre pressure is affected by heat especially when inside parked cars.

vibe rubber covers and grip

take care to avoid damage to foam rubber. foam rubber is not under warranty.

vibe moving parts

excessive wear can reduce effectiveness and safety. parts may need periodic lubrication. inspect essential components for: fraying – especially webbing straps and safety harnesses. wear – locks, snap fasteners, tyres, plastic parts, zips and moving parts. safety –locks must not be loose.

rights & remedies

consumers may have extra rights in some countries or states. our products are warranted against defects in materials and workmanship for one year from the date of purchase. if the product has a manufacturing fault we will repair it for free. if not practical to repair it, we will, at our discretion, replace the part in question. if the product fails due to wear and tear, accident, neglect or negligence, or is outside the warranty, we will happily repair it for a reasonable charge.

who is covered? original purchaser buying product from an authorised dealer. proof of purchase is required.

what is covered? workmanship or materials that are deemed faulty, providing buggy has at all times, been used in normal conditions, in accordance with the instructions, and been properly maintained.

what is not covered? second hand product, modified product, poorly maintained product, normal wear, fading and fabric cuts, improper

use (by way of example); abnormal use: not following instructions; child left unattended; safety harness not used; excessive load; transport damage i.e. airline or freight damage.

customer costs within warranty. customer is responsible for any inwards freight charge to return product to manufacturer or its representative for warranty and or service.

customer costs outside warranty. where proof of purchase is not provided or product is outside of one year period. manufacturer (or agent) reserves right to charge a service fee and/or charge for parts replaced/ repaired. a return freight charge may apply.

exclusions. any consequential loss or damage to any person or property directly or indirectly as a result of using product.

who do I contact? please discuss any warranty or service queries with your store of purchase. you will be required to show proof of purchase. they will inform you of next step. products that are returned directly to manufacturer by customer will NOT be eligible for warranty.

log on & relax

please register your product purchase through our online warranty registration by visiting

www.philandteds.com

Warnings

keep instructions with your buggy for future reference. injury may result from improper use or not following all safety precautions.

warning never leave children unattended in the buggy, it may be dangerous. take extra care with any child asleep in the buggy.

warning ensure that all locking devices are engaged before use.

warning any load attached to the handle affects the stability of the vehicle. do not hang luggage or carry extra children on the buggy. do not allow a child to stand on the seat. do not carry extra weight over that allowed by the instructions; this may make the buggy unstable. do not place more than 3kg/7lbs in the parcel tray.

warning always use the safety harness to avoid serious injury from falling or sliding out. always secure all safety harness straps and ensure

it's correctly fitted and adjusted to secure the child firmly. make sure children are clear before folding, erecting or adjusting the buggy. if required, use the D-rings on the waist strap to attach a safety harness.

warning apply brakes when parking the buggy. apply brakes when loading or unloading children. a buggy in the single or baby & toddler configuration is intended for children up to 4 years or maximum weight of 40kg/88lbs and height of 1.1m or 3.3 feet. in the double configuration the recommended max load is 25kg/55lbs in front seat and 15kg/33lbs in rear seat.

warning always place wrist strap around your wrist when using buggy.

warning do not place a child in the rear seat of a buggy without a heavier child being in the front seat. do not modify the buggy or use accessories not designed for the buggy. they may be unsafe.

warning double kit is not recommended for children under 6 months.

warning care should be taken if buggy is used on stairs or escalators.

warning the buggy should not be used near an exposed flame.

warning ensure that fingers are kept well clear of folding mechanism when folding buggy.

warning the buggy is not suitable for running, skating, horse riding, water skiing, acrobatics or similar activities. It is not a flotation device.

enjoy!

> send 102 - 112 daniell st newtown wellington nz

visit www.philandteds.com

ph +64 4 380 0833

fax +64 4 380 0137

© Phil and Teds Most Excellent Buggy Company Ltd 2007.

We (Phil and Teds Most Excellent Buggy Company Ltd) own the intellectual property rights in our brands, designs and inventions featured in this publication. These include, without limitation, the phil&teds, adapt&survive!, &, INLINE trade marks and INLINE DOUBLE BUGGY shape. We actively pursue people who infringe our intellectual property.