



# Atlas Vintage

## Instruction Manual

**IMPORTANT** PLEASE READ THESE INSTRUCTIONS CAREFULLY  
BEFORE USING THIS PRODUCT  
KEEP FOR FUTURE REFERENCE

Thank you for choosing Obaby. To ensure that your stroller is used in accordance with these instructions, please read them fully. This stroller conforms to EN 1888 : 2003 and is guaranteed for 6 months from the date of purchase against manufacturing defects. If you have any problems please contact Obaby - info@obaby.co.uk or 0845 078 0290

Your child's safety may be affected if you do not follow these instructions.

- ⚠ WARNING:** A child's safety is your responsibility
- ⚠ WARNING:** Ensure that all locking devices are engaged before use
- ⚠ WARNING:** Children should be harnessed in at all times. Always use the crotch strap in combination with the waist belt
- ⚠ WARNING:** DO NOT hang shopping bags from the handle as this may affect the stroller's stability. Use the basket provided - maximum weight 3kg
- ⚠ WARNING:** This product is not suitable for running or skating. Never run or skate with your stroller, especially across roads
- ⚠ WARNING:** It may be dangerous to leave your child unattended
- ⚠ WARNING:** Do not use this product as a bed, your child may become tangled in straps and suffocate
- ⚠ WARNING:** The child should be clear of moving parts while making adjustments or opening or folding the stroller. Risk of serious injury (entrapment, laceration or amputation) exists

- This stroller requires regular maintenance by the user
- Overloading, incorrect folding and the use of non approved accessories may cause damage or break the stroller
- It may be unsafe to use replacement parts or accessories e.g. child seats, bag hooks, rain covers, etc, other than those approved by the manufacturer or distributor
- Always balance the weight of the stroller evenly
- We advise that your stroller is not stored or left out side at any time
- This stroller is intended to carry one child from birth and up to a maximum weight of 15kg

#### ROUTINE CARE & MAINTENANCE

- For cleaning, use only a mild detergent and warm water
- DO NOT USE BLEACH
- DO NOT USE any abrasive substances
- From time to time, check your stroller for loose screws, worn parts, torn material or stitching. Replace or adjust the parts as needed.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please call the help line 08450 782 290 or email info@obaby.co.uk





fig. 1



fig. 2



fig. 3



fig. 4



fig. 5



fig. 6

To open your stroller release the storage clip on the side of the stroller (fig.1 & 2). Lift the handles away from the wheels (fig.3).

Using your foot push down on the primary release lock at the back of the stroller (fig.4). Ensure the lock clicks into place (fig.5 & 6).

**⚠ WARNING: Ensure that all locking devices are engaged before use. The child should be clear of moving parts while making adjustments or opening or folding the stroller. Risk of serious injury (entrapment, laceration or amputation) exists.**

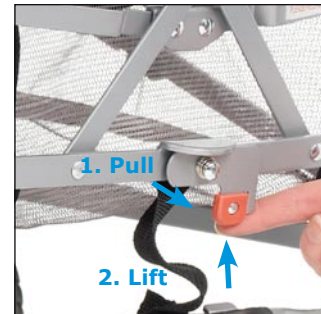


fig. 7



fig. 8



fig. 9



fig. 10

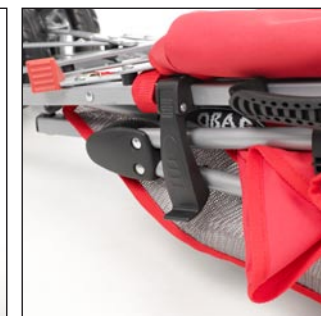


fig. 11

Before attempting to fold your stroller

- The front wheels should be locked in place
- The basket and seat unit should be empty
- The hood should be folded
- The seat should be fully upright

To fold the stroller, release the primary lock, at the back of the stroller, by pulling away from the stroller and then lifting using your hand or foot (fig.7).

Next, using your foot press down on the secondary lock at the right hand side of the stroller (fig.8). Then push the handles forwards and down towards the front wheels (fig.9), until completely folded (fig.10). Ensure the storage clip is engaged (fig.11).



fig. 12



fig. 13



fig. 14

To fit the front wheels, push the wheels onto the front legs until they click into place.



fig. 18



fig. 19

To lock the brakes fully, push down on each brake lever using your foot (fig.18).

To release the brakes, lift each brake lever using your foot (fig.19).

### Using the Front Swivel Wheels

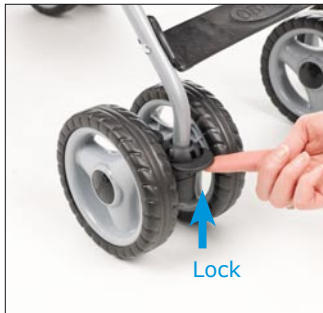


fig. 15



fig. 16



fig. 17

To lock the swivel wheels, first ensure the front wheels are facing forward inline with the chassis, then lift the lever up (fig.15).

To put the wheels in swivel mode, push the lever down on the front of each front wheel (fig.16 & 17).

### Adjusting the Backrest



fig. 20



fig. 21



fig. 22

To put upright, simply lift the back of the seat to the desired height (fig. 20).

To recline the backrest, slightly lift the catches on either side of the seat, then depress the buttons (fig. 21) and gently pull towards the back of the stroller (fig. 22).



fig. 23



fig. 24



fig. 25

To fit the hood, place the hood on the chassis, inline with the seat unit. Clip the hood catches onto each side of the chassis (fig.23 & 24). Then to prevent the hood slipping down pull the elastic around the chassis and loop over the peg on the side of the hood (fig.25).

### Adjusting the Hood



fig. 26



fig. 27



fig. 28

To fold the hood, pull the hood adjusters up on both sides of the hood, as shown above.

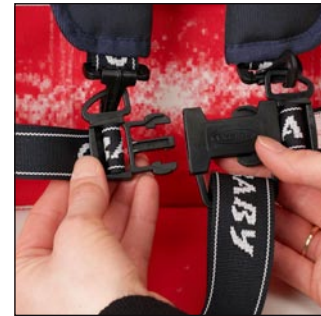


fig. 29



fig. 30



fig. 31



fig. 32



fig. 33

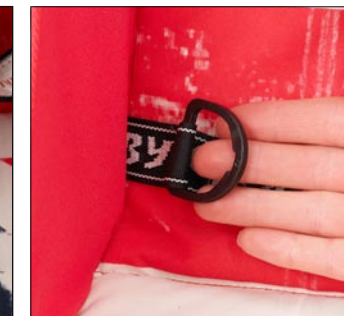


fig. 34

To fasten the harness, insert both fasteners on the waist strap into the clasp on the crotch strap (fig.29) and clip each chest strap onto the waist strap (fig.30 & 31).

To release the harness, squeeze each of the clips in the centre of the harness and pull away from the clasp, one at a time (fig.32).

Adjust the harness length using the buckles on each strap (fig.33).

#### 'D' Ring

The 'D' rings highlighted are provided for fitting a separate harness complying with BS 6684 (fig.34).

**WARNING:** Ensure the harness is correctly fitted before use. The harness should always be adjusted to fit correctly. Children should be harnessed in at all times. Always use the crotch strap in combination with the waist strap.



fig. 35



fig. 36



fig. 37

To adjust the calf rest press the levers either side of the seat and lift or lower to the correct position.

## Fitting the Raincover



fig. 38



fig. 39



fig. 40

To fit the raincover, place the raincover over the stroller and allow the raincover to drape over the front of the stroller.  
Secure in place using the velcro tabs on the back of the raincover (fig.38) and clip onto the front legs of the stroller (fig.39 & 40).

**⚠ WARNING:** When using the raincover, regularly check your child has adequate ventilation and is not overheating.  
Unless it is raining, the raincover should be removed.



info@obaby.co.uk  
0845 078 0290