

phil&teds®

english



.....> inline™ sport survival guide

> welcome to the crazy world of parenting.
take a deep breath...

note:

female
PG ~~parental~~ guidance required






NB baby not included



sport.....undressed! <.....



.....> do it!
-no not that, this

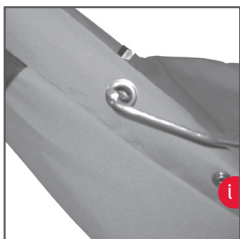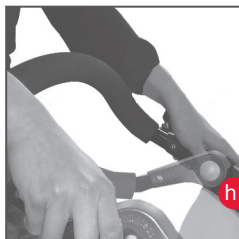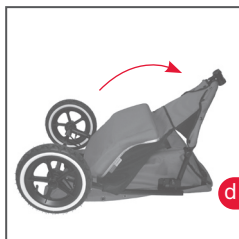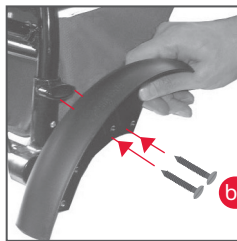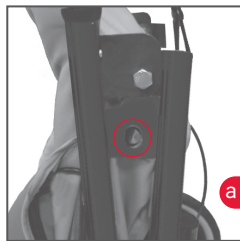



..... > that's it!

sport instructions

assembling your new phil&teds inline™ sport is effortless and fun. just follow these simple steps and in 5 minutes you'll be off!

bits & bobs

red numbers below refer to buggy parts indicated above.

1. rear guards
2. rear wheels
3. sun hood
4. front wheel
5. rear axles
6. handle
7. back flap
8. footwell
9. swivel lock
10. harness
11. fold lock
12. auto frame lock
13. pull bar
14. wrist strap
15. double kit (sold separately)
16. retaining strap (comes with double kit)

safe & sound

we've attained the following safety standards:

- EN 1888:2005
- AS/NZS 2088:2000
- ASTM F833-07a

wheeling & dealing

keep tyres inflated to 22PSI

- a release fold lock by pushing in grey button.
- b attach rear guards using a screw driver as shown. screws are located in rear guard housing on buggy frame.
- c to attach rear wheels: first insert axles in rear wheels (from side without brake disk). then depress silver axle hub and insert into buggy axle housing.
- d lift footwell as far as hinge will allow.
- e to attach front wheel: fully extend swivel lock and insert wheel rod into buggy frame, as shown. release swivel lock and check wheel is in place for use.
to lock/unlock swivel wheel: extend and rotate swivel lock, aligning silver pin with hole in underside of swivel lock knob. turn wheel towards rear of buggy (parallel with rear wheels). lock will click into place. to swivel, extend black swivel lock out and rotate until knob rests on silver pin instead of being inserted into hole.

gettin' it together

- f turn buggy over onto 3 wheels. pull handle up until you hear a resounding 'click'. ensure that auto frame locks are engaged.
note for double buggy do not lift frame using double seat, as you may damage hinges.

brakes

- g** stand behind buggy and with one foot push brake down to activate; lift to deactivate.
note always apply brakes when parking your buggy. apply brake before loading children.

handle

- h** stand behind buggy, press in both grey buttons, rotate handle into desired position.

hood

- i** Insert crimped wire ends into eyelets on both sides of buggy frame.
j rotate hood back and slide rear sunhood wires into fabric channels on top of buggy frame as shown.
k rotate hood forward and attach sunhood snaps to buggy frame then pull hood eyelets over hooks on top of buggy frame.

harness

- l** unclip buckles on breastplate and place baby in buggy. set upper strap height to fit snugly over baby's shoulders. breastplate should fit snugly on baby's chest. (you should be able to fit 2 average sized fingers between straps and baby).

ups & downs

- there are 4 seat positions: upright, heads up, sleepy and lie-flat. adjust as required using seat adjustment clips and zips at rear of main seat.
m upright: all 4 clips and both zips are done up.
n heads up: all 4 clips are done up but both zips are undone.
o sleepy: all 4 clips are undone but both zips are done up.
p lie-flat: all 4 clips and both zips are undone.
q to return seat to upright position:
 invert base, reattach clips and do zips up.

plastic back flap

- r** clear plastic back flap can be attached to back of buggy to help protect your child from poor weather. attach using velcro and as shown. back flap can be rolled up and held at top using velcro under hood.
warning: never allow plastic to fall over child.

baby & toddler buggy

- to use baby & toddler position requires purchase of a phil&teds double kit accessory.
s double kit comes with hinges attached, push in nib springs and insert into buggy, once pull bar is removed.

note hinges are marked with L and R denoting left and right when viewed from behind buggy.

- t** feed retaining strap beneath rear of hood, loop it around handle and connect clip.
- warning:** never use baby & toddler buggy without using retaining strap.

double buggy

- u** start with buggy seat in upright position. remove hinges from double seat. align tubes with supports on back of buggy frame. push in nib springs and slide on ensuring nib springs pop through holes on double kit frame. load heavier toddler in front seat first. then place lighter toddler in double seat at back. always unload rear toddler first.
- warning:** never place child in double seat without a child in front seat.
- v** double kit has a lay-back setting. to recline: unzip side zips and push top of seat under bar as shown.

folding

- remove double kit if attached in rear position.
- w** rotate both auto frame locks at bottom of frame seat down 180° and press in, allowing frame to collapse.
- x** lift up cross bar allowing front wheel to fold under frame. press frame flat until fold lock clicks into place.
- note** by removing front wheel buggy will fold smaller.

add & adapt

other products available for the sport:

buggy covers

- single and double storm covers
- single and double sun mesh covers

buggy beds and liners

- cocoon
- lamb skin liner
- race seat liner
- sponge ted liner
- buggy bunny liner
- snuggle & snooze sleeping bag

buggy storage

- pannier bags
- hang bag
- travel bag
- shop & drop

cuts & bruises

cleaning and caring for your sport.

sport fabric

brush off dirt. more intense cleaning can be done by hand, in warm water, using mild natural soap. do not use detergents or bleach. air dry.

sport frame

brush dirt off frame and wheels regularly. clean with non-abrasive household cleaner and soft cloth. wash off sand and salt after visiting beach. always dry frame if wet.

sport tyre and inner tube

the valve is car-size. manually inflate to 20 – 22psi max. releasing air gives a softer ride but lower pressure reduces tread life. new inner tubes and tyres are generally available (2¹/₄" x 12¹/₂" tyre) from your dealer, cycle or specialist wheel shops. standard tyre kits can repair punctures. a flat tyre can result from grit holding the valve open; to check: inflate tyre, deflate rapidly, and re-inflate. tyres and tubes are not under warranty. do not over inflate. tyre pressure is affected by heat especially when inside parked cars.

sport rubber covers and grip

take care to avoid damage to foam rubber. foam rubber is not under warranty.

sport moving parts

excessive wear can reduce effectiveness and safety. parts may need periodic lubrica-

tion. inspect essential components for: fraying – especially webbing straps and safety harnesses. wear – locks, snap fasteners, tyres, plastic parts, zips and moving parts. safety –locks must not be loose.

rights & remedies

*consumers may have extra rights in some countries or states.

our products are warranted against defects in materials and workmanship for one year from date of purchase. if product has a manufacturing fault we will repair it for free. if not practical to repair it, we will, at our discretion, replace part in question. if product fails due to wear and tear, accident, neglect or negligence, or is outside the warranty, we will happily repair it for a reasonable charge.*

who is covered? original purchaser buying product from an authorised dealer. proof of purchase is required.

what is covered? workmanship or materials that are deemed faulty, providing buggy has at all times been used in normal conditions, in accordance with instructions, and been properly maintained.

what is not covered? second hand product. modified product. poorly maintained product. normal wear, fading and fabric cuts. improper use (by way of example): abnormal use; not following instructions; child left unattended; safety harness not used; excessive load; trans

port damage i.e. airline or freight damage.
customer costs within warranty. customer is responsible for any inwards freight charge to return product to manufacturer's representative for warranty and or service.

customer costs outside warranty. where proof of purchase is not provided or product is outside of one year period. manufacturer's representative reserves right to charge a service fee and/or charge for parts replaced/ repaired. a return freight charge may apply.

exclusions. any consequential loss or damage to any person or property directly or indirectly as a result of using product.

who do I contact? please discuss any warranty or service queries with your store of purchase. you will be required to show proof of purchase. they will inform you of next step. products that are returned directly to manufacturer by customer will NOT be eligible for warranty.

log on & relax

please register your product purchase through our online warranty registration by visiting www.philandteds.com

Warnings

keep instructions with your buggie for future reference. injury may result from improper use or not following all safety precautions.

warning never leave children unattended in the buggie, it may be dangerous. take extra care with any child asleep in the buggie.

warning ensure that all locking devices are engaged before use.

warning any load attached to the handle affects the stability of the buggie. do not hang luggage or carry extra children on the buggie. do not allow a child to stand on the seat. do not carry extra weight over that allowed by the instructions; this may make the buggie unstable. do not place more than 3kg/7lbs in the parcel tray.

warning always use the safety harness to avoid serious injury from falling or sliding out. always secure all safety harness straps and ensure

it's correctly fitted and adjusted to secure the child firmly. make sure children are clear before folding, erecting or adjusting the buggy. if required, use the D-rings on the waist strap to attach a safety harness.

warning apply brakes when parking the buggy. apply brakes when loading or unloading children. a buggy in single or baby & toddler configuration is intended for children up to 4 years or maximum weight of 40kg/88lbs and height of 1m or 3.3 feet. in the double configuration the recommended max load is 25kg/55lbs in front seat and 15kg/33lbs in rear seat.

warning do not place a child in the rear seat of a buggy without a heavier child being in the front seat. do not modify the buggy or use accessories not designed for the buggy. they may be unsafe.

warning care should be taken if the buggy is used on stairs or escalators.

warning the buggy should not be used near an exposed flame.

warning always place wrist strap around your wrist when using buggy.

warning ensure that fingers are kept well clear of the folding mechanism when folding the buggy.

warning double kit is not recommended for children under 6 months.

warning the buggy is not suitable for running, skating, horse riding, water skiing, acrobatics or similar activities. It is not a flotation device.

enjoy!

> send 102 - 112 daniell st newtown wellington nz

visit www.philandteds.com

ph +64 4 380 0833

fax +64 4 380 0137

© Phil and Teds Most Excellent Buggy Company Ltd 2007.

We (Phil and Teds Most Excellent Buggy Company Ltd) own the intellectual property rights in our brands, designs and inventions featured in this publication. These include, without limitation, the phil&teds, adapt&survive!, &, INLINE trade marks and INLINE DOUBLE BUGGY shape. We actively pursue people who infringe our intellectual property.