

mothercare



qing

user guide

IMPORTANT. KEEP FOR
FUTURE REFERENCE

This lightweight stroller features ergonomic Rotilt® handles, a 4 position reclining backrest (suitable for babies from birth), all round suspension and lockable swivel wheels.

Also included are a head support cushion, coseytoe, multi-position hood and sunshade, raincover, a basket for carrying up to 2kg of shopping and baby items, and a hood pocket for small items up to 250g.

diagram



description

swivel wheel unit (2)


hood

head support cushion


coseytoe

raincover


opening the stroller

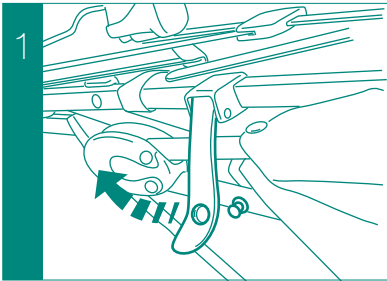


1 Release the folding latch at the side of the stroller.

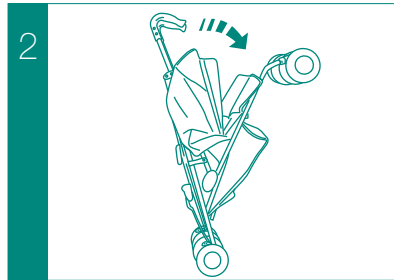

2 Push the front legs down towards the floor.

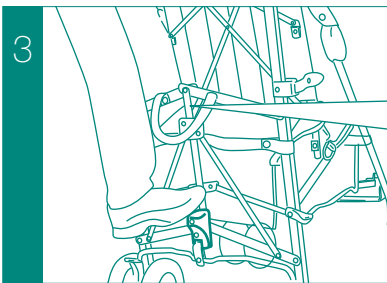


3 Push down on the locking bars until straight.

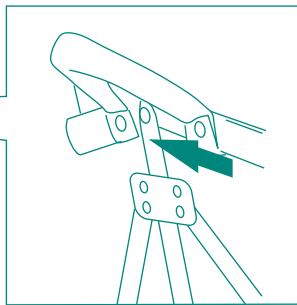

The words "Press down if visible" on the vertical bar must not be visible while the stroller is in use.


fitting the front wheels

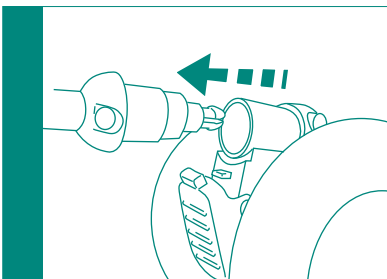


Push each of the front swivel wheel assemblies on to the front legs until they click securely into place.

Note: You may have to press the swivel lock pedal so it is in the position shown before fitting the wheels.


hood

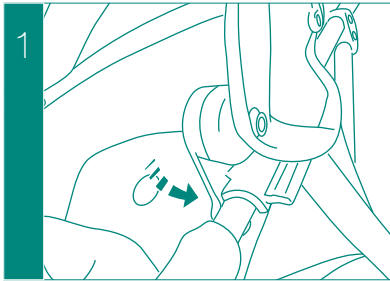


Attach the hood clips to the frame, above the seat fabric.

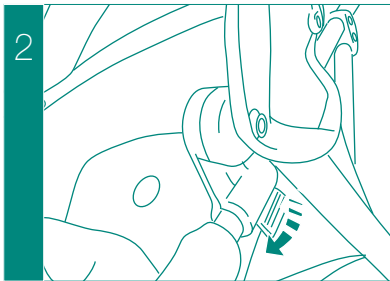

Close the outer clip.

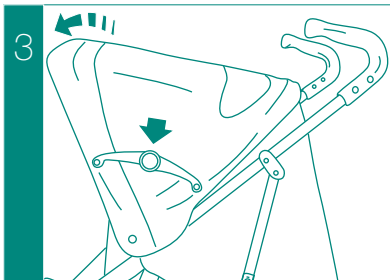


Push the front of the hood forwards and press down on the side mouldings to secure.

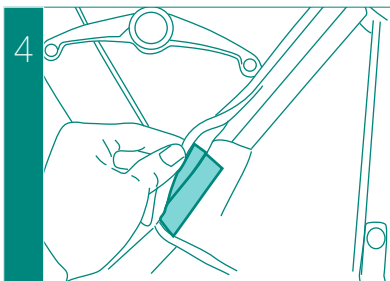


Secure the fastening material at the corner of the hood.

fold away sunshade

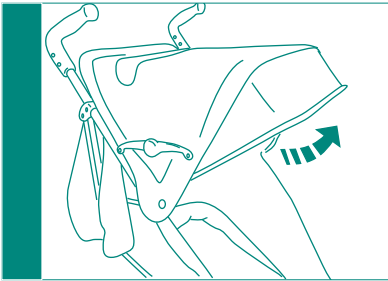


As required, pull the sunshade out from inside the top of the hood
Tuck inside when not in use.

zip off back panel & pivoting hood

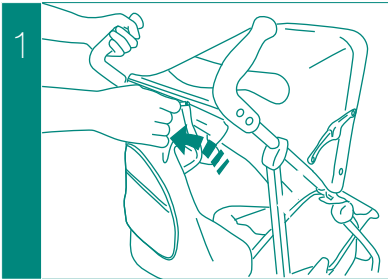


The back panel of the hood can be zipped off to allow extra ventilation, and to allow the hood to be positioned for best sun protection.

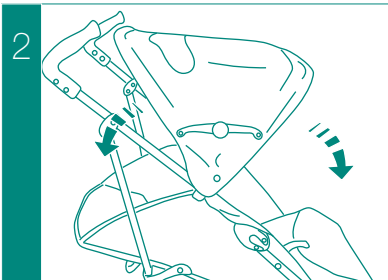

With the back panel removed, pivot the hood to the position that gives best protection from the sun.


coseytoe

1

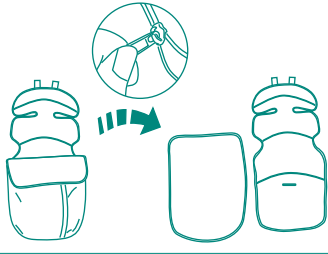


Remove the front panel of the coseytoe by undoing the zip.

2

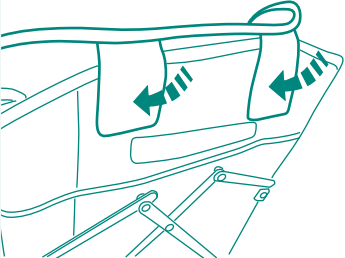


Attach the two fasteners at the top of the back panel to the mating fasteners behind the backrest of the seat.

3

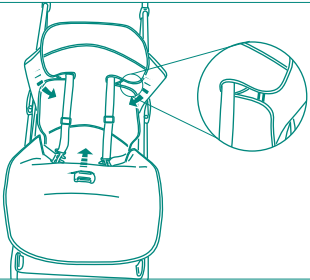

Pass the shoulder straps through the slots in the back panel, and pass the crutch strap and buckle through the lower slot.

4

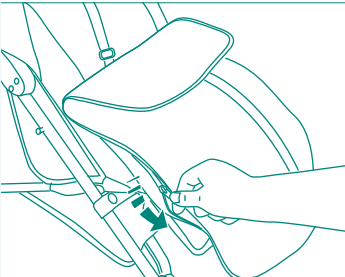


Re-attach the front panel of the coseytoe.

When the cosytoe is used, regularly check that your child is not overheating


harness

1

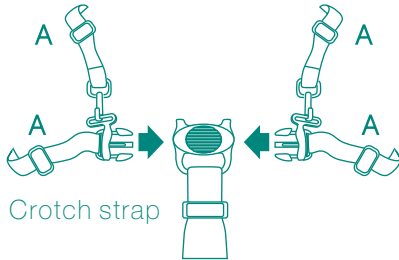

To fasten
Insert both fasteners securely into
the clasp.
Adjust each strap length with
buckles A.


2

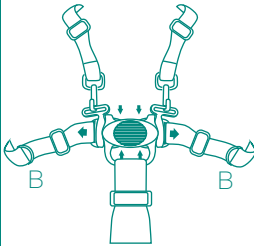

To release
Press the fastener prongs and pull apart.
'D' rings (B) are provided for fitting a separate
harness complying with BS 6684.

Your child should be securely harnessed
at all times and should never be left
unattended, even for short periods.

brakes

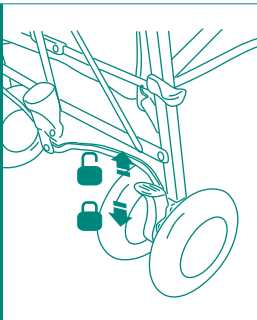


Push down on either brake pedal to engage
the brakes.

Pull up to release the brakes.


Check that the brakes have engaged correctly
by gently pushing the stroller.

backrest

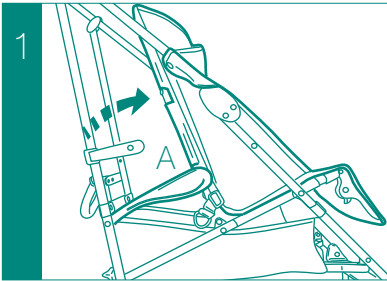

The backrest can be reclined to a choice of 4 positions.


First push the seat forwards slightly to release the seat adjusters (A).

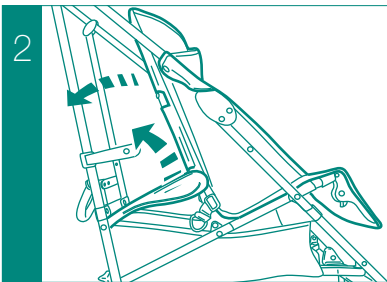

Lift the seat adjusters (A) on each side of the backrest, and at the same time, raise or lower the seat back to the desired position.

Push the seat adjusters down, always ensuring that the seat is secure before use.


calf support

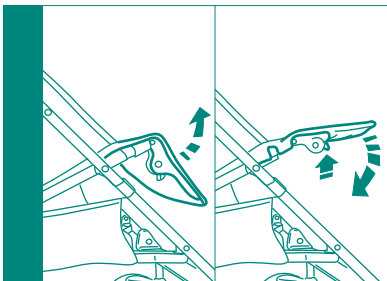

The calf support can be adjusted to either of two positions by pressing the lever shown and raising or lowering to the desired position.

The lower position is recommended for older children.

self-centring swivel wheel locks

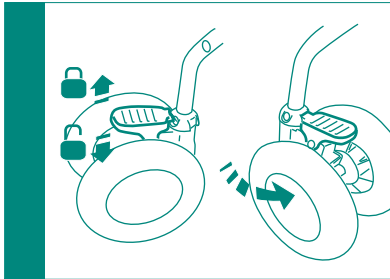


The swivel wheel locks can be activated from any wheel position, and will then lock automatically when the wheels point in a straight line.

Lift the pedal up to lock.

Press the pedal down to release.

raincover

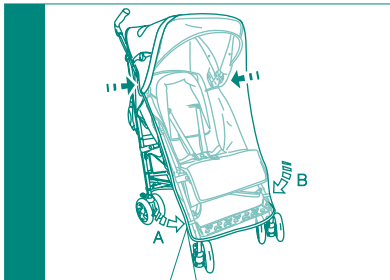


Place the rain cover over the hood.

Attach the press fasteners on each side of the cover to the hood frame as indicated.

Attach fasteners A and B as shown.


Regularly check that your child has adequate ventilation and is not overheating.

Remove the raincover whenever possible.

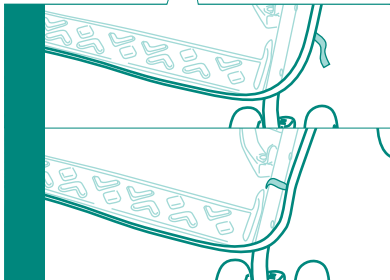


folding

1

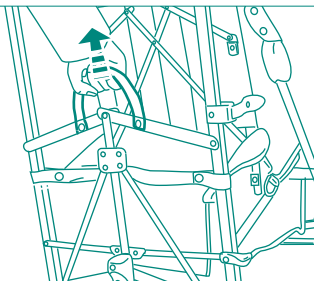


Empty the basket and fold the hood back.
Position the backrest in the upright position.
Lift the main lock upwards.

2

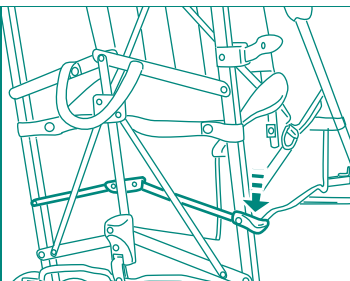


Press the secondary lock down.

3

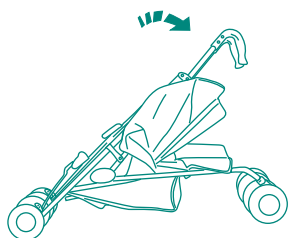


Push the handles forward.

4

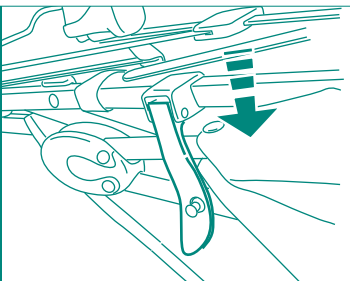


Secure the catch if it has not locked automatically.

removing the seat fabric

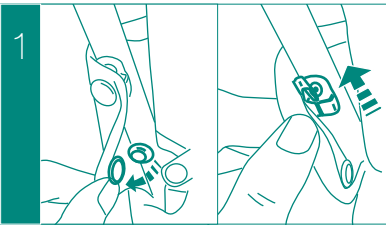


The seat fabric can be removed for sponge cleaning.


Undo the press stud at each side of the seat and lift the hook out of the slot.

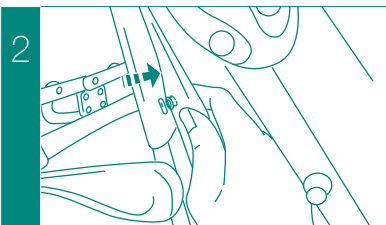


Undo the press studs at the back of the seat fabric.

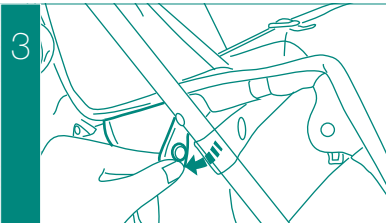

Undo the press studs under the sides of the seat fabric.

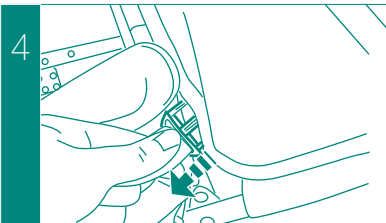

Undo the harness and feed the waist straps through the slots.

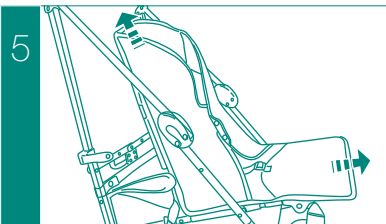

Lift the fabric away from the chassis.

You may find this easiest if the chassis is partly folded.

To re-attach the fabric, repeat the above steps in reverse order.

- Your stroller requires maintenance by you.
- Regularly inspect the locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are secure and in full working order.
- Brakes, wheels and tyres do wear and should be replaced if necessary. This can be arranged through your local Mothercare store.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light silicone lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your stroller and make opening and folding easier.
- Plastic and metal parts may be sponged clean with warm water and a mild detergent.
- The seat may be cleaned by sponging lightly using warm water and a mild detergent. Dry thoroughly before storing.
- Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form. Store in a dry safe place.
- Do not leave in sunlight for prolonged periods - some fabrics may fade.
- Your stroller should be serviced and reconditioned before using it for a second baby, or within 18 months, whichever is the sooner. This can be arranged by your local Mothercare store.

- **WARNING! YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY.**
- Designed and tested to comply with BS 7409:1996.
- Do not allow your child to climb unassisted into the stroller.
- Ensure your child wears a correctly fitted and adjusted harness at all times. For extra safety, D-rings are provided for a separate safety harness approved to BS 6684.
- Ensure children are clear of moving parts before making adjustments.
- Overloading, incorrect folding and the use of non-approved accessories may damage or break this stroller.
- Never leave raincovers, hoods or aprons on indoors, in a hot atmosphere or near a heat source - your child may overheat.
- Do not use replacement parts or accessories, e.g. child seats, bag hooks, raincovers etc. other than those approved by Mothercare as they may make the stroller unsafe.
- Do not overload with additional children, goods or accessories. Bags and other items must not be hung from the handle.
- Always apply the brakes when stationary.
- Be careful when going up or down kerbs. Remove your child and fold the stroller when going up or down stairs or escalators.
- Do not use your stroller in a manner for which it is not designed.
- Do not let children play with or hang on to the stroller.
- Hold on to your stroller when close to moving road vehicles or trains. Even with the brake on, the draught from the vehicle may move the stroller.
- If your stroller is used by someone unfamiliar with it e.g. grandparents always show them how it works.
- Never leave your child unattended, even for the shortest time.