


## notice

1. This is a 'Universal' child restraint. It is approved to Regulation No. 44-04 series of amendments, for general use in vehicles and it will fit most, but not all car seats.
2. A correct fit is likely if the vehicle manufacturer has declared that the vehicle is capable of accepting a 'Universal' child restraint for this age group.
3. This child restraint has been classified as 'Universal' under more stringent conditions than those which applied to earlier designs which do not carry this notice.
4. If in doubt, consult either the child restraint manufacturer or the retailer.
5. Only suitable if the approved vehicles are fitted with 3 point static or retractor safety belts approved to UN/ECE Regulation No.16 or other equivalent standards.

Made in France for Mothercare, Watford, Herts, WD24 6SH

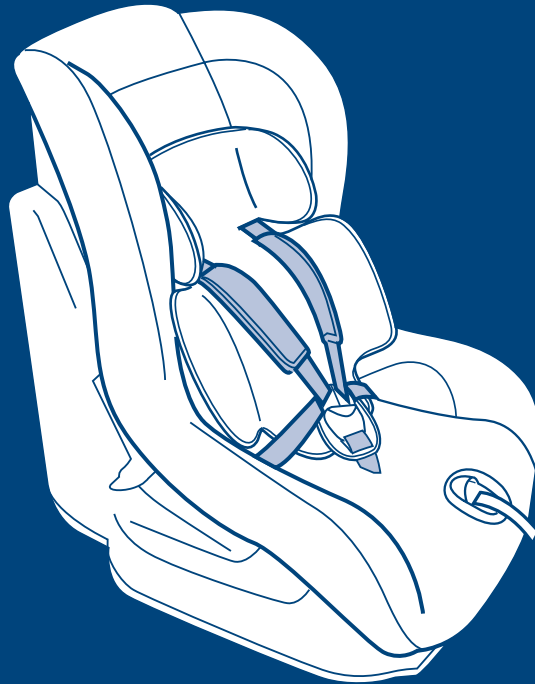

## seville car seat user guide

Important. Please retain  
this user guide for  
future reference



Conforms to  
ECE R44-04  
Universal


**EXTREME HAZARD:** Parents should not under any circumstances use this child restraint on a passenger seat equipped with an airbag.

- PLEASE READ THOROUGHLY BEFORE COMMENCING INSTALLATION AS AN INCORRECT INSTALLATION COULD BE DANGEROUS.
- DO NOT USE THIS CHILD SEAT IN PASSENGER SEATS EQUIPPED WITH AIRBAGS.
- This child seat can be installed in either a forward or rearward facing position in passenger seats.  
Do not use on side facing or rear facing vehicle seats.
- Never use this child seat without fastening the child's harness correctly, and never attempt to use it without fastening it into the car as described in these instructions.
- When using the child seat, it is most important that the car seat belt is correctly routed. Ensure the belt straps are not kinked or twisted.
- The child seat must be tightened down on the upholstery as tight as possible to ensure maximum protection. The recommended method is shown in these instructions.
- Do not add to or modify the seat in any way.
- It is recommended that this car seat should be changed when it has been subjected to violent stresses in an accident or has become badly worn. Periodically inspect the harness for wear, paying particular attention to the attachment points, stitching and adjusting devices.
- Do not leave your child unattended in the seat at any time.
- Ensure that no part of the seat is trapped in a door or folding seat. If your car has a folding rear seat, ensure that it is correctly latched in the upright position.
- Car interiors can become very hot when in direct sunlight. It is therefore recommended that the child seat is covered when not in use. This prevents components, particularly those attached to the child seat, becoming hot and burning the child.
- In the event of an emergency it is important that the child can be released quickly. This means that the buckle is not fully tamper-proof, so your child must be taught never to play with the buckle.
- Luggage and other heavy or sharp objects should be secured in the car. Loose objects are liable to cause injury in the event of an accident.
- The safest seating position for a child car seat is on the rear seat of a vehicle.

This seat is classified as Group 0 for children from birth to 10kg (birth to 9 months approx.) - in a rearward facing position.

This seat is also classified as Group 1 for children weighing 9kg to 18kg (9 months - 4 years approx.) - in a forward facing position. Do not use forward facing until your child's weight is at least 9 kg. (However mothercare strongly recommends that you use the seat rearward facing until your child reaches the maximum permissible weight for the seat.)

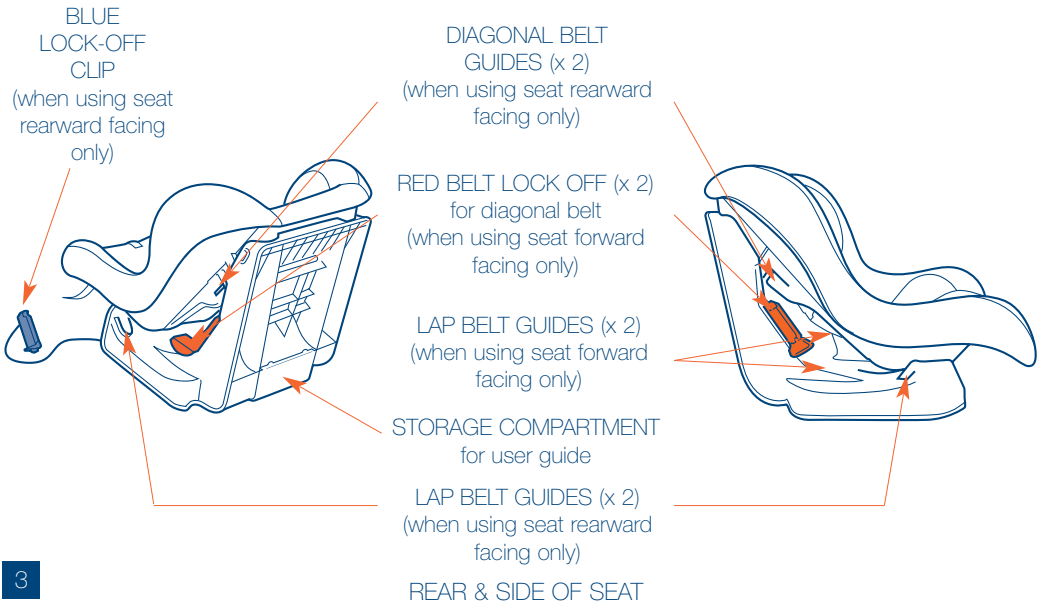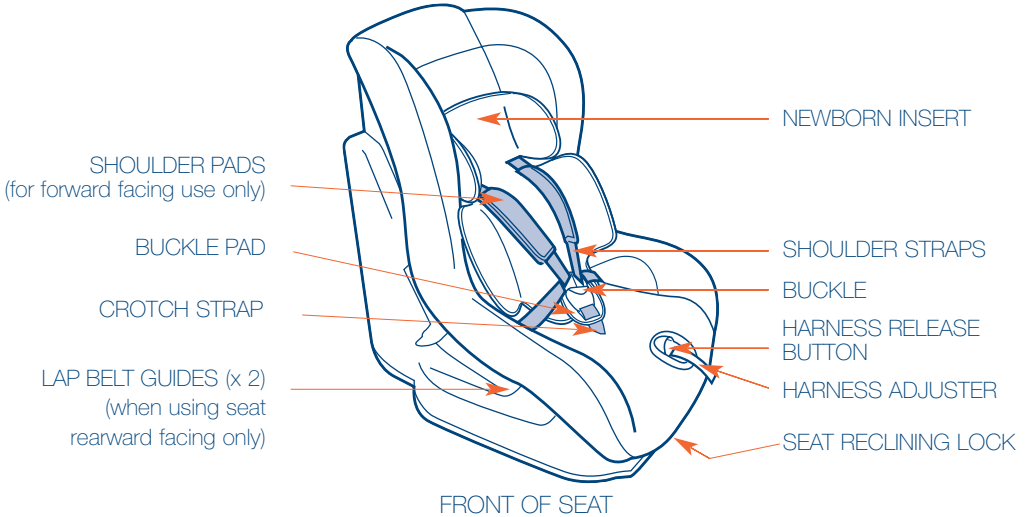

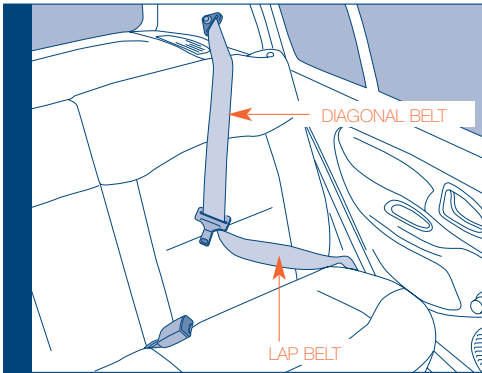

Your mothercare child seat can only be installed with a lap and diagonal seat belt in the front or rear passenger seats of a car.

**DO NOT USE THIS CHILD SEAT IN PASSENGER SEATS EQUIPPED WITH AIRBAGS**

This child seat is approved to ECE R44-04 and is **ONLY** suitable for use with a 3 point lap and diagonal seat belt, approved to UN/ECE Regulation No.16 or other equivalent safety standards.

#### Front Seat

Anyone, especially children, travelling in the front seat of a car **must** be properly restrained. Children under three years **must** use a suitable approved restraint designed for their weight.


#### Rear Seat

All adults and children **must** use seat belts or child restraints where they are fitted in the rear of a car and are available for use.



If the appropriate restraint is not available, children from 3 years **must** wear an adult seat belt if available.

- This user guide should be stored in the storage compartment at the rear of the seat.
- When the child seat is not in use, it is recommended that it is fastened into the car with a seat belt to avoid being thrown about in the event of an accident.
- In an emergency your child can be released quickly by pressing the red button on the harness buckle.
- If you travel with passengers using both the front and rear seats, the lighter occupants should be in the rear seats and the heavier occupants in the front of the vehicle. When a child is in the front seat, the lighter passenger should be behind the child.
- **Do not** allow the child seat to come into contact with corrosive substances e.g. battery acid.

## securing the harness

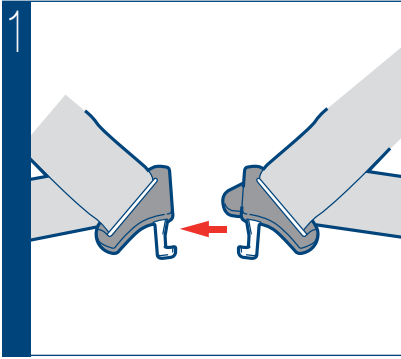


Place the left hand harness connector into the right hand one. They should slot together neatly.

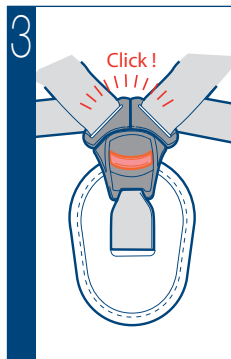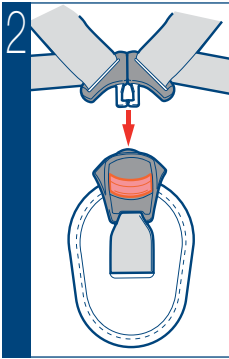

Push the harness ends into the hole in the buckle at the top of the crotch strap. You will hear and feel a 'CLICK' when it is secure. Check by attempting to remove the connectors by pulling the webbing above and below the buckle. Periodically check that your child has not released the buckle. (To release the harness, press the red button down.)

## tightening the harness

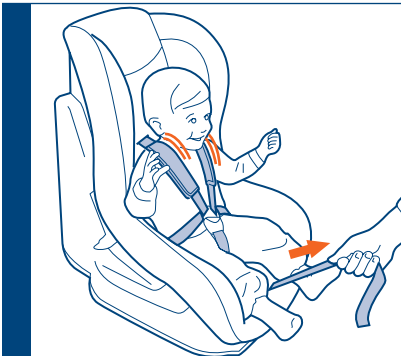


Pull gently on the harness adjuster to take up any slack in the harness.

A loose harness is **dangerous**. Check that it is correctly adjusted **every** time you use the seat.

It is recommended that there is just enough room to insert two fingers between the shoulder straps and the child's chest.


## loosening the harness

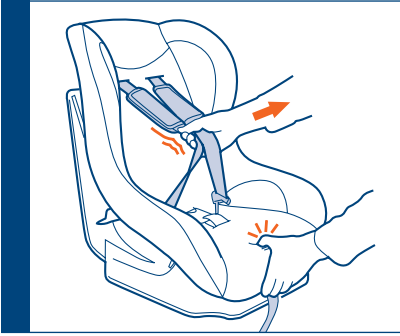

If the harness is too tight, loosen it by pulling on both straps, while at the same time, pressing the tab through the hole in the seat cover.

**Do not** pull on the shoulder pads which are fixed in length.

## adjusting the shoulder height

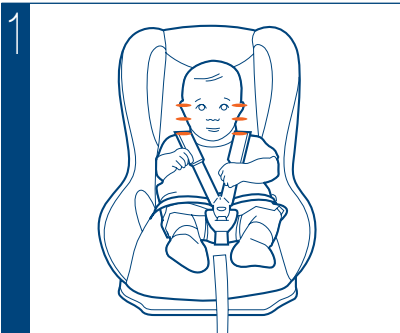


The harness has 3 height positions.

**WHEN USING THE SEAT REARWARD FACING**  
The straps should go at, or just **below** the height of your child's shoulders, and the shoulder pads should be removed (see 'to adjust the harness height' section).

**WHEN USING THE SEAT FORWARD FACING**  
The straps should go at, or just **above** the height of your child's shoulders.

## to adjust the harness height

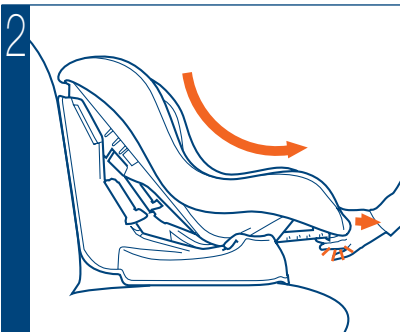


Fully recline the seat (see section 9). This then gives access to the back of the shell.

3




Press the harness adjuster, and at the same time, pull the metal yoke to the side of the seat, so the shoulder straps are fully accessible.

4

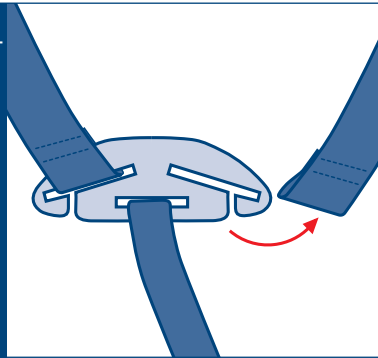


Remove ONE of the shoulder straps from the metal retaining yoke. Leave the other one in place for reference.


5

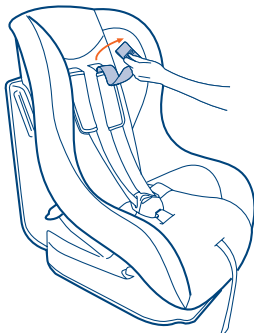


Feed the shoulder strap you have undone through the shoulder slot in the back of the shell and the cover. It is not necessary to feed the strap through the shoulder pad.

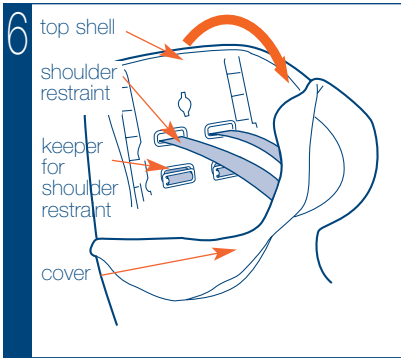

Pull back the top part of the seat cover from the side of the seat you are adjusting.

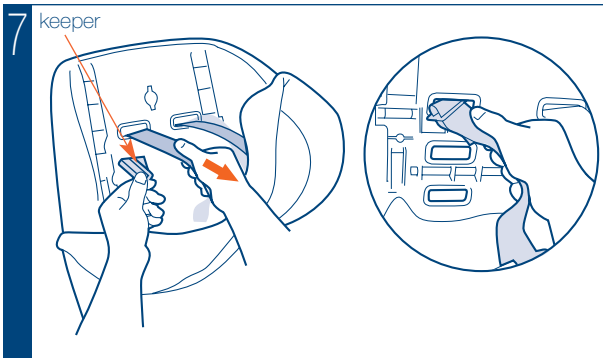

Release the keeper for the shoulder restraint by feeding it back through the slot, and through the liner and cover.

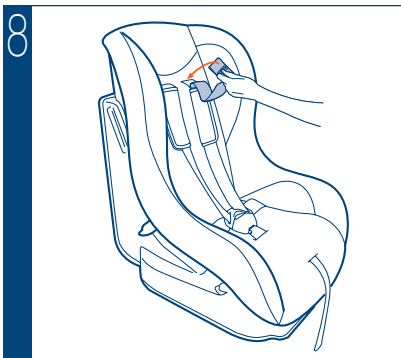


Re-assemble the harness by threading the keeper of the shoulder restraint back through the desired slots in the cover, liner and seat.  
**IMPORTANT :** make sure you thread the keeper back into the slot below. Use the other harness for reference. Feed the shoulder strap through the same slot and re-attach onto the metal retaining yoke. Then repeat the same procedures for the shoulder strap and restraint on the other side. Make sure there are no kinks or twists in the straps. When completed, replace cover on seat shell.

Note: when moving the harness to the top slots, you must move the seat into the most upright position before feeding the keeper through the slot. At the rear of the seat, then push the keeper down through the gap between base and seat. Then fully recline the seat again to be able to feed the keeper back through the slot below. Repeat the process to re-attach the shoulder strap onto the metal yoke.

Your car seat is equipped with a newborn insert for added support for your child. Adjust its position as required, ensuring that the head pad fully supports your child's head.



lowest

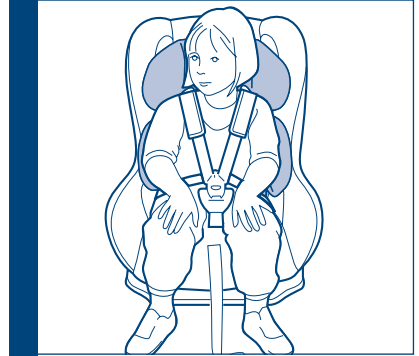

highest

**WARNING:** Do not use this child seat in passenger seats fitted with airbags.  
Do not use on rear-facing or side-facing vehicle seats.


from birth to 10kg - rearward facing - use 3 point seat belts only



When used rearward facing, the child seat must be in the fully reclined position. Refer to section 9 for details of how to recline the seat.

Place the child's car seat on a passenger seat in the front or rear of a car with a 3 point seat belt.


Make sure the child seat is facing towards the rear of the car.

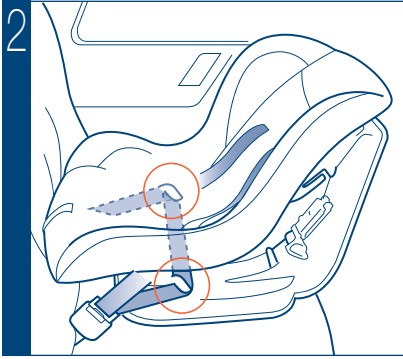


Pull the lap and diagonal sections of the car seat belt until they are fully extended and then feed both through the space between the seat shell and base.

Fasten the seat belt in the normal way.

Make sure that the lap section of the seat belt passes through the guides located on both sides of the front of the seat base.

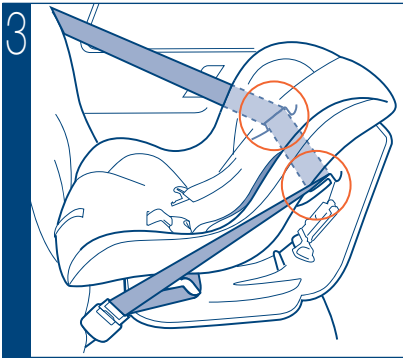


Thread the diagonal strap through the two upper guides located on the back of the seat shell.

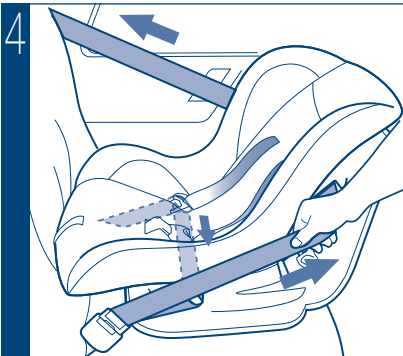

First tighten the lap section of the seat belt by pulling it in the direction shown. Then pull the diagonal section to ensure that it is also tight. Your car seat should now be fixed securely.

Check that there are no kinks or twists in the car seat belt.


Do not use the red lock-off for the rearward facing installation.

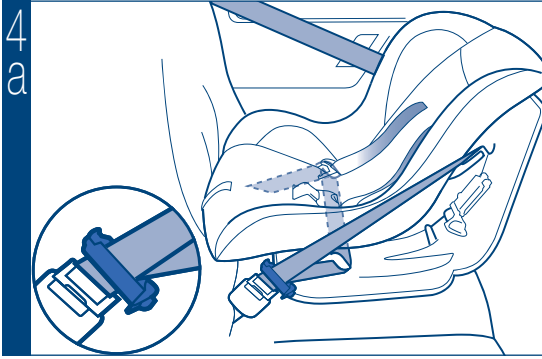

Lock the two sections of the belt with the loose blue lock-off clip. The blue lock-off clip should be positioned against the buckle of the vehicle seat belt.


Do not use the red lock-off for the rearward facing installation.

### from 9kg to 18kg - forward facing - using a 3 point seat belt

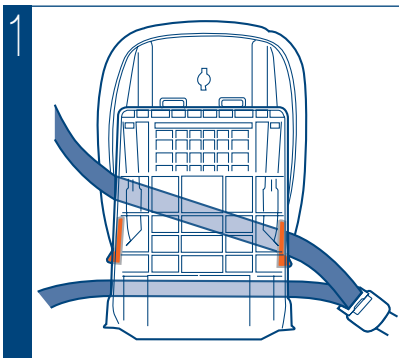


Place the child's car seat on the passenger seat with a 3 point seat belt. Make sure it is facing towards the front of the car. Fully recline the seat. Pull the lap and diagonal sections of the car seat belt out until fully extended and feed both through the space between the shell and base.

Fasten the seat belt in the normal way.

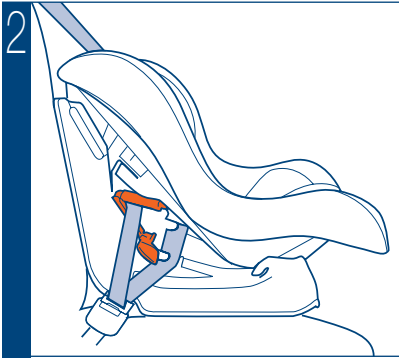


Make sure that the lap section passes through the two guides located below the red lock-off clips.

Open the red lock-off clip next to the buckle. Then route the diagonal section of the car seat belt through the open lock-off clip and diagonally across the seat back.

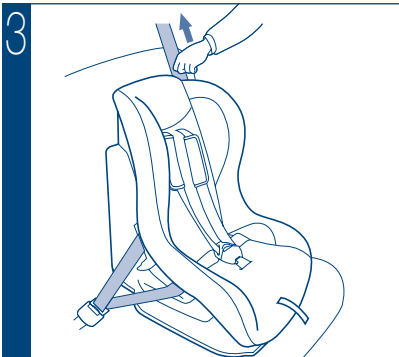

Push the child seat right down into the car seat, and tighten both sections of the seat belt by pulling the belt in the direction shown.

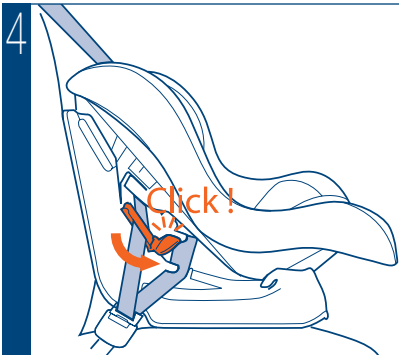


Close the lock-off across the diagonal belt and lock the clip using the red lever, making sure you hear a "click".

**You must only use the lock-off located next to the buckle.**

It is essential that the belt is pulled tight, and there is no slack.

Check that there are no kinks or twists in the vehicle seat belt.

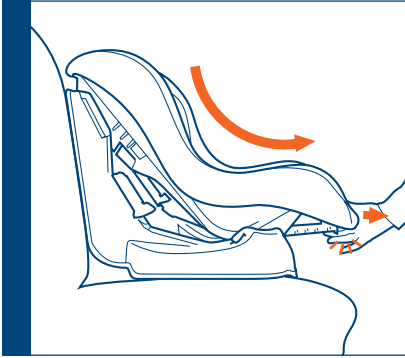

In a forward facing position your child car seat can be reclined in a choice of five positions to make it comfortable for your child.

To do this, lift and then pull the lever under the front of the seat. This releases the lock, enabling the seat shell to recline or move back to the desired position.

Release the lever to lock the child seat in the chosen position.

**IMPORTANT: IN THE REARWARD FACING POSITION YOU MUST ONLY USE THE MOST RECLINED POSITION.**

However safe a child seat is, however well built it is, your child's safety depends on you. Read this final checklist once you have fitted your child seat in your car.

1. Check that you have adjusted the harness to suit your child. A fitting for winter clothes will be too loose for a child wearing summer clothes.
2. Check you have installed your child seat properly using a 3 point lap belt - see section 8, fitting your child seat into your car.
3. Check that your child seat is secure before each journey.
4. Make sure that there are no kinks or twists in the car seat belt.

**REMEMBER:** Misusing your child seat will reduce the protection and safety you offer your child.

## removing the fabric cover

---

- The fabric cover can be removed from the seat.
- To remove the harness, follow the procedure set out in section 6 to the stage that both shoulder straps and restraints are released and passed through the cover. Then pass the loose ends of the shoulder straps through the buckle connectors.
- To remove the crotch strap, fully recline the seat, and lift cover of front of the seat. Put hand below shell to access metal keeper of the crotch strap. Twist and pass metal keeper through slot in base. Carefully remove the cover from the seat.
- When putting the cover back on the seat, ensure that you push the edges of the fabric cover back under the plastic cover of the one pull harness adjuster for a neat finish.

## cleaning the seat

---


- See sewn in label for washing instructions.
- The harness and plastic parts can be sponged with a mild detergent and warm water. Ensure no soap gets into the buckle or adjusters.  
**Do not** use chemical cleaners or bleach on any part of the car seat.  
Dry thoroughly before use.

Your child seat and its cover have been carefully designed, manufactured and tested to the highest safety standards.

**Do not** put your child's safety at risk by using it without a seat cover. The seat cover should not be replaced with any other than the one recommended by mothercare, because the cover constitutes an integral part of the restraint performance.

The safety of this seat may be compromised by the use of accessories not approved by mothercare.

The replacement parts listed below are available for your product. In the event that you require any of these parts, please contact your local mothercare store or contact Customer Care on 08453 30 40 30.

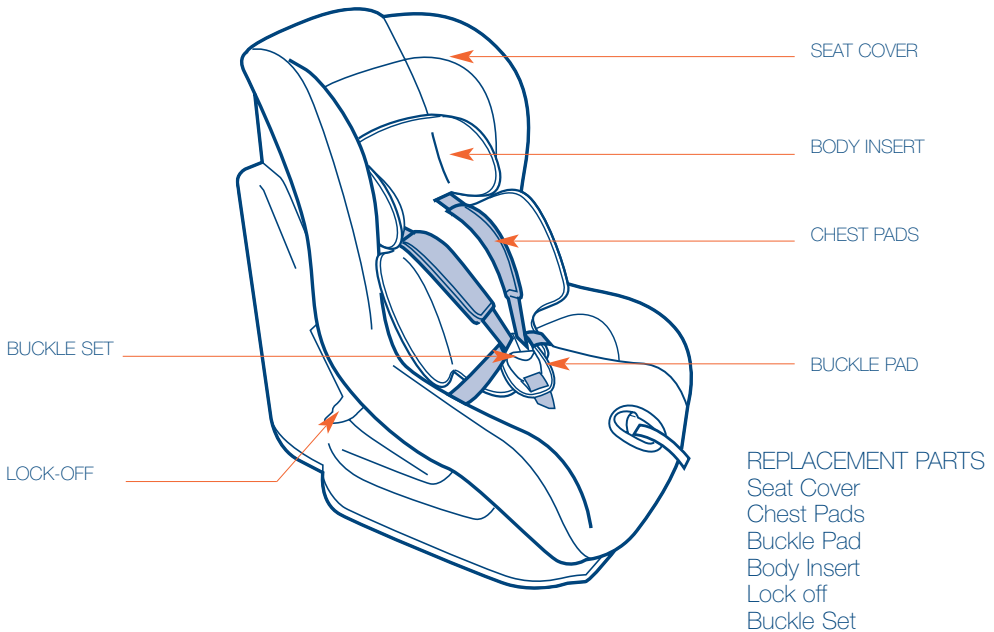

If you have a problem with this product or require replacement parts, or require help with fitting this car seat, please contact your nearest mothercare store or telephone the mothercare Customer Care Line on 08453 30 40 30.

Alternatively, write to: Customer Care, Mothercare Uk Ltd, Cherry Tree Road, Watford, Herts, WD24 6SH